


# Steering wheel

## ADJUSTING THE STEERING WHEEL

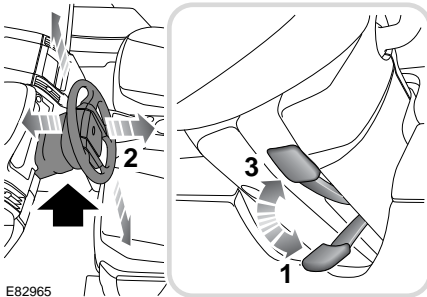

E82965

### WARNINGS



Never adjust the steering wheel position whilst the vehicle is in motion. Doing so will reduce control of the vehicle, and may cause unpredictable steering movements.




After adjusting the steering wheel position, ensure that the locking lever is returned to the fully up position. Failure to do so will reduce control of the vehicle, and may cause unpredictable steering movements.

To adjust the steering wheel :-

1. Release the locking mechanism by pulling the lever down.
2. Adjust the steering wheel to the desired position.
3. Push the locking lever back up, and ensure that it's fully home.

## AUDIO CONTROL

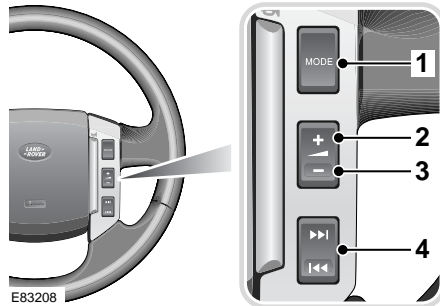


E83208

1. Press to switch between radio, CD, or AUX.
2. Press to increase volume.
3. Press to decrease volume.
4. Press and release to scroll through preset radio stations or CD tracks. Press and hold to search up or down for the next or previous radio station/CD track.

# Steering wheel

---

## Audio control using the telephone buttons

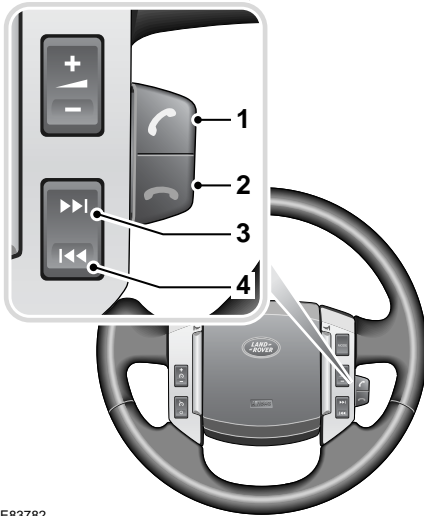

E83782

When the telephone system is inoperative the telephone controls on the steering wheel can be used to operate the audio system.

1. Operates as a menu control. Press to enter or confirm menu selections.
2. Operates as an exit control. Press to return to the previous screen or menu.
3. Operates as forward motion of the rotary control. Press to scroll forward through menu items.
4. Operates as backward motion of the rotary control. Press to scroll back through menu items.