


# Windows and mirrors

## ELECTRIC WINDOWS

### WARNING



All of the windows have an anti-trap protection system. However, before closing a window care must be taken to ensure that none of the occupants have any part of their body in a position where it could be trapped. Even with an anti-trap system serious injury or death can occur.

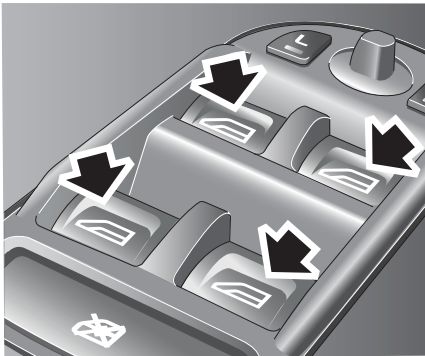

LAN1677

With the ignition on, or engine running, press the switch down to the first position to lower the window, pull it up to the first position to raise the window. Release the switch at any point to stop window movement.

The windows will operate for five minutes after the engine is switched off, as long as the doors are not opened.

### One shot operation

### WARNING



Ensure that you remove the remote control when leaving occupants in the vehicle. This will prevent unsupervised operation of the windows, which may result in injury.

All four windows have one-shot operation. Briefly pull the switch up to the second position and release, the window will continue to raise until fully closed. Briefly press the switch down to the second position and release, the window will continue to lower until fully open. Pressing or pulling the switch again will stop the window.

### Overriding anti-trap protection

Anti-trap protection will stop window movement if an obstruction or resistance is detected. Check the window and its aperture and remove any obstructions, ice, etc. If it is still necessary to raise the window, the override procedure is as follows :-

1. Attempt to close the window, anti-trap will prevent closure and lower the window slightly.
2. Within ten seconds attempt to raise the window again, anti-trap will prevent closure and lower the window slightly.
3. Attempt to close the window for a third time, this time hold the switch in the close position. The window will raise whilst the switch is held. Hold until closed.

**Note:** If this procedure fails to remove the blockage, the window operation may need to be reset.

# Windows and mirrors

---

## Window reset

The windows will need to be reset if the battery is disconnected, becomes discharged, or power supply is interrupted.

Reset as follows :-

1. Close the window fully.
2. Release the switch, then lift it to the close position and hold for two seconds.
3. Open the window fully.
4. Release the switch, then push it to the open position and hold for two seconds.
5. Lift and release the switch to operate the one touch function.
6. Repeat the procedure on each window.

## Window isolator



E81162

### WARNING



If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.

---

To prevent operation of the rear windows, press the inhibitor switch. To allow passengers control of the windows, press the switch again.

# Windows and mirrors

## ELECTRIC EXTERIOR MIRRORS

### Adjusting



LAN1679

1. Left mirror adjustment.
2. Right mirror adjustment.

Press the left or right mirror button as required. The green tell-tale light will illuminate in the button to indicate that it has been selected.

Move the toggle switch to adjust the mirror as required.

### Mirror dip when reversing (memory seats only)

When reverse gear is selected the driver and passenger door mirrors are automatically adjusted to provide an improved viewing angle for reversing.

The exact dipped position can be adjusted when the mirrors are dipped. The next time reverse is selected, the newly adjusted position will be selected.

When the gear selector is moved out of reverse, the mirrors will return to their previous position.

**Note:** If the vehicle speed exceeds 7 km/h (4 mph) in reverse the mirrors will return to their normal driving position for enhanced visibility.




The automatic mirror dip feature can be enabled or disabled by your Land Rover Dealer.

# Windows and mirrors

---

## INTERIOR MIRROR

### Auto dimming

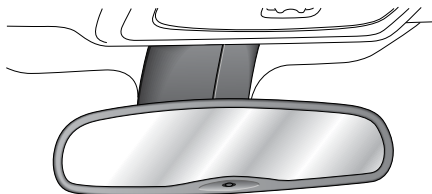

E80553

The interior mirror dimming is adjusted automatically according to the amount of ambient light when the ignition is on. If reverse gear is selected, the automatic dimming feature is turned off to allow maximum visibility for reversing.

**Note:** If the mirror becomes detached from the windshield it should be reattached by a Land Rover Dealer.

**Note:** If the rear screen is obscured, or the light falling on the mirror is reduced by an obstruction, the automatic dimming feature may not operate correctly.