

Auxiliary input (AUX IN) socket

AUXILIARY INPUT SOCKET

WARNINGS



Make sure that any auxiliary devices are stored securely while the vehicle is in motion. Any loose objects can present a serious hazard during sudden manoeuvres, emergency braking or an accident.



Do not place any item connected to the auxiliary input socket or the auxiliary power socket on the vehicle's seats, carpets, or other upholstery. The heat generated by these devices may cause damage to the upholstery, or in extreme cases, a vehicle fire.



Do not leave any auxiliary input devices connected while the vehicle is left unattended. There is a risk of heat damage or fire, in addition to the risk of theft.


CAUTION



Read the manufacturer's instructions for any device before it is connected to the vehicle's audio system. Keep to any instructions about connection and operation and make sure that the device is suitable. Failure to do so may result in damage to the vehicle's audio system or the auxiliary device.

AUX (Auxiliary Input) mode allows extra equipment to be connected to the vehicle's audio system. Items such as a personal stereo, MP3 player, hand-held navigation unit etc., can be plugged in to the vehicle's audio system.


Note: The volume levels and sound quality available from devices connected to the auxiliary inputs may vary widely. If the connected audio device is equipped with a line out socket as well as a headphone socket, the line out socket should be used.

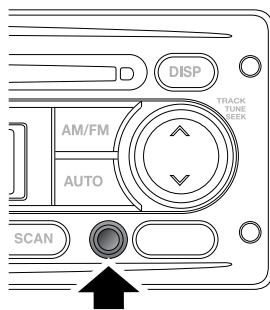

E84604

Auxiliary audio devices are connected via the 3.5 mm stereo jack socket. If fitted, the auxiliary audio socket is situated at the bottom right of the audio unit.

Auxiliary mode

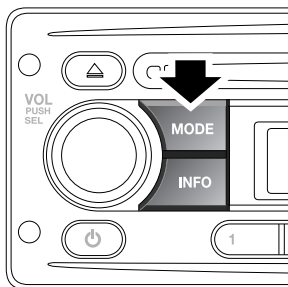

E85379

To listen to an auxiliary input source, switch on and connect the device to the jack socket. Press and release the **MODE** button repeatedly until **AUX** mode is displayed on the screen. The audio unit will start playback automatically.

Index

A

ABS driving hints	65
Accessories	8
Adjusting the windscreen washer jets	41
Blocked jets	41
Air vents	50
Arming the alarm	15
Alarm indicator	15
Engine immobilisation	15
Ashtray	55
Audio control	137
Alternative frequencies	138
Area settings	139
Audible beeps	139
Balance adjustment	138
Bass response adjustment	137
Default volume adjustment	139
Fader adjustment	138
Long wave	139
Loudness setting	138
Regional mode	138
Telephone setting	139
Traffic announcement (TA) volume adjustment	138
Treble response adjustment	137
Audio unit overview	134
Autostore control	140
Autostoring radio stations	140
Auxiliary input socket	148
Auxiliary mode	148

B

Battery care	95
Battery charging	98
Battery warning symbols	95
Bonnet lock	84
Booster cables	97
Booster cushions	30
Brake fluid check	91
Checking the fluid level	91
Topping up the fluid	91
Brakes	
Principle of operation	65
Bulb changing	33
Bulb specification chart	39

C

Car wash	78
Changing a bulb	33
General information	33
Headlamp unit bulbs	35
High level brake lamp	37
Interior lamp bulbs	38
Number plate lamps	37
Rear lamp bulbs	36
Removing the headlamp unit	34
Side repeater lamp	38
Changing a fuse	117
Changing a road wheel	108
Changing a wheel	114
Jack and tool kit	108
Locking wheel nuts	110
Operating the bottle jack	111
Positioning the bottle jack	112
Positioning the pillar jack	113
Spare wheel	109
Wheel changing safety	110
Changing the vehicle battery	99
Battery disposal	100
Disconnecting	99
Effects of disconnecting	100
Refitting	100
Replacement batteries	100
Changing the wiper blades	42
Charging the vehicle battery	98
Checking the wiper blades	42
Child safety locks	30
Child seats	29
Child restraint check list	29
Cigar lighter	54
Cleaning the exterior	78
Washing the vehicle	78
Cleaning the interior	79
Carpets and fabrics	80
Instrument pack, clock, and audio equipment	80
Plastic and cloth	79
Seat belts	80
Clock	
Analogue	54

Index

Clutch fluid check	92	Exterior mirrors	44
Checking the fluid level	92	Folding the mirror body	44
Topping up the fluid	92	Positioning the mirror for towing	44
Compact disc		F	
Ejecting	143	Fastening the seat belts	27
Error messages	142	Releasing the seat belts	27
Fast forward/reverse	145	Fuel and refuelling	
Loading	142	Technical specifications	71
MP3 file playback	146	Fuel consumption	71
Pause	144	Fuel quality	69
Playback	144	Sulphur content	69
Random track selection	145	Fuse box locations	117
Repeat tracks	145	Main fuse box	117
Track scanning	145	Secondary fuse box	117
Track selection	144	Fuse specification chart	
Coolant check	88	Fuse positions and specifications	118
Cup holders	55	Main fuse box	118
D		Secondary fuse box	120
Dimensions	128	G	
Direction indicators	33	General information on radio frequencies	10
Disarming the alarm	16	H	
Deactivating engine immobilisation	16	Handbrake	66
Deactivating the alarm when triggered	17	Hazard warning flashers	32, 121
Driving after a collision	122	Head restraints	21
Before starting or driving	122	Lowering	21
When driving	122	Raising	21
E		Headlamp levelling	32
Economical driving	68	Vehicles fitted with front seats only	32
Driving tips for economy	68	Heated seats	25
Maintenance and fuel economy	68	Hints on driving with ABS	65
Electric windows	43	ABS and off-road driving	66
Engine compartment overview	85	ABS warning indicator	65
Engine coolant check	88	I	
Checking the coolant level	88	Inspecting safety system components	122
Topping up the coolant	88	Instrument panel overview	45
Engine oil check	87	Instrument panel	45
Checking the oil level	87	Interior lamps	33
Engine oil specification	88	Interior mirror	44
Topping up the oil	88	J	
Engine specifications	126	Jump starting	97
Essential towing checks	75	K	
Event data recording	7	Keys	10

Index

L

Lashing points	123
Levelling	74
Lighting control	31
Main beam	31
Main lighting switch	31
Load carriers	73
Load carrying	
General information	72
Loading compact discs	142
Locking and unlocking	13
Locking and unlocking from inside the vehicle	13
Mislock	14
Taildoor	13
Tailgate	14
Luggage anchor points	72

M

Maintenance	
General information	81
Technical specifications	94
Manual climate control	51
Controls	51
Heated screens	52
Manual seats	19
Front seat base removal	19
Manual transmission	61
MP3 file playback	
Searching an MP3 data disc	147

O

Oil check	87
On/off button	137
Opening and closing the bonnet	84
Closing the bonnet	84
Opening the bonnet	84

P

Parking brake	66
Applying the parking brake	66
Parking on a slope	66
Releasing the parking brake	67
Power steering fluid check	90
Checking the fluid level	90
Topping up the fluid	90

Principle of operation

Brake pads	65
Seat belt checks	27
Seat belt safety	26
Seat belts	26
Wet conditions	65

R

Radio reception	133
Radio aerial	133
Rear fog lamps	31
Rear seats	21
Folding the rear seats	22
Raising the rear seats	23
Rear window wiper and washers	41
Recommended towing weights	75
Refitting the roof	57
Refuelling	70
Fuel filler cap	70
Fuel filling	70
Remote control	11
Repairing minor paint damage	80
Roof racks and load carriers	73
Roof rack safety	73
Running out of fuel	69
Running-in	68

S

Safety	7
Safety precautions	69
Seat belts	
Principle of operation	26
Security code	136
Sitting in the correct position	18
Sliding windows	43
Snow chains	115
Starting a diesel engine	60
Station preset buttons	140
Steps	56
Storage compartments	56
Cubby box	56
Sun visors	54
Sunroof	52
Opening and closing	52
Removing the sunroof	53

Index

T

Technical specifications	116
Capacities	94
Fuel consumption	71
Fuel specification	71
Lubricants and fluids	94
Transmission fluids and capacities	64
Tow bar	76
Tow bar dimensions	76
Tow bar mounting points	77
Towing a trailer	74
Trailer electrical connection	74
Towing points	123
Front and rear towing eyes	123
Towing the vehicle on four wheels	123
Towing procedure	124
Traffic information control	141
PTY news announcements	141
Traffic announcements	141
Transfer gearbox	61
High range	61
Low range	61
Neutral	62
The differential lock	62
Using the transfer gearbox	62
Transmission	
Technical specifications	64
Transporting the vehicle	123
Type approvals	131
Declarations of conformity	131
Tyre care	103
Age degradation	104
Directional tyres	105
Flat spots	107
Pressure compensation for ambient temperature changes	107
Punctured tyres	104
Replacement tyres	105
Tyre checks	104
Tyre pressures	106
Tyre wear	103
Tyre glossary	115
Terms used	115

U

Using booster cables	97
Disconnecting the cables	98
Using seat belts during pregnancy	28
Using snow chains	115
Using the key	10
Using the remote control	11
Locking	11
Remote battery	11
Remote control	11
Unlocking	11
Using winter tyres	108

V

Vehicle identification number (VIN)	125
Vehicle identification plate	125
Vents	50
VIN	125
Volume control	137

W

Warning lamps and indicators	47
Anti-lock braking system - Amber	48
Battery charging - Red	47
Brake systems - Red/Amber	48
Check engine - Amber	47
Differential lock - Amber	49
Direction indicators - Green	48
Glow plug - Amber	47
Hazard warning lamps	48
Headlamp main beam - Blue	48
Heated rear screen - Amber	49
Low fuel - Amber	49
Low oil pressure - Red	47
Over-speed warning - Amber (Gulf states only)	49
Rear fog lamp - Amber	49
Seat belt - Red	47
Side lamps on - Green	48
Traction control - Amber	49
Trailer direction indicators - Green	48
Washer fluid check	93
Topping up the fluid	93
Washing	78
Waveband button	139
Weights	126

Index

Wheels and tyres	
General information	101
Technical specifications	116
Windscreen washers	40
Windscreen wipers	40
Wiper operation	40