



ABOVE & BEYOND



# RANGE ROVER SPORT

QUICK START GUIDE FOR REAR MEDIA



SOME FEATURES MAY NOT BE FITTED TO YOUR VEHICLE

## REMOTE CONTROL FOR REAR MEDIA

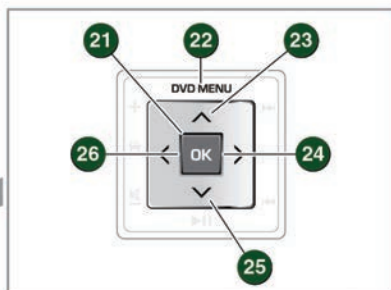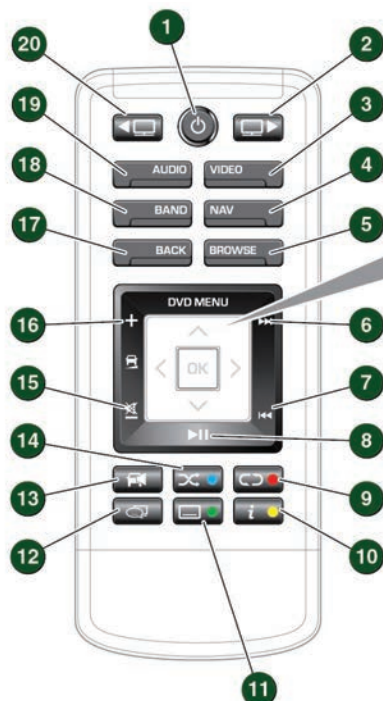

1. Press and release to switch off screen. Press and hold to switch off Rear media system.
2. Right screen select.
3. \*Video source select.
4. Navigation summary.
5. Browse/TV channel list.
6. Next track/file/channel/station.
7. Previous track/file/channel/station.
8. Play/Pause.
9. Repeat.
10. Information.
11. Subtitles on/off.
12. TV audio/video stream selection.
13. Cabin audio volume on/off.
14. Shuffle.
15. Cabin audio volume decrease/mute.
16. Cabin audio volume increase.
17. Back to previous menu.

18. Radio band select.
19. \*Audio source select.
20. Left screen select.
21. OK. Confirm selection.
22. DVD menu.
23. \*\*Cursor control: Up.
24. \*\*Cursor control: Right.
25. \*\*Cursor control: Down.
26. \*\*Cursor control: Left.

*\*Available sources depend on vehicle configuration.*

*\*\*Multi-function keys depending on source selected.*

## HEADPHONE CONTROLS

1. Main power.
2. Change audio channel.
3. Headphone volume.

When the headphones are not being used, make sure the power is switched off to prevent battery discharge.




## TOUCH SCREEN CONTROL



**Rear media** must be first selected from the front touch screen Audio/Video menu.

From the **Rear media** menu, select a rear screen. If both rear screens are required to display the same source, select **Sync**.

Select the **Source** soft key.

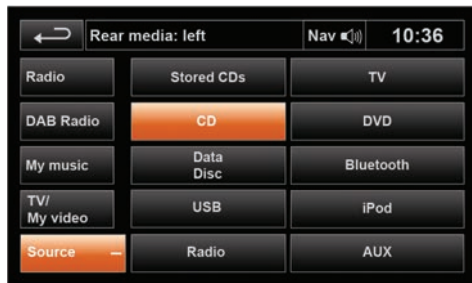

From the next menu select one of the available sources e.g., **CD**. The selected media will be displayed on the rear screen (s). Touch **Source** or the back key to return to the previous menu, where soft keys can now be used for control of the selected source.

**Operating note.** While the **Rear media** menu is displayed on the front screen, the remote control is disabled. The remote control can also be disabled via the **Lock** soft key.

## REMOTE CONTROL SOURCE SELECTION



Select the left screen (20) or right screen (2).

Select a source button, AUDIO (19) or VIDEO (3).

Multiple presses of either button will display available sources in that category on the selected rear screen.

Audio source examples

Radio, DAB, DVD/CD, USB, Stored CDs, Bluetooth Audio and AUX.



Video source examples

TV, DVD/CD, USB and AUX




## LIMOUSINE MODE CONTROL



Control of a source that is shared by both front and rear systems, e.g., radio, CD, DVD, can be transferred to the remote control.

Touch the **Limo mode** soft key. Touch again to return control to the front screen.

## NAVIGATION SUMMARY ★

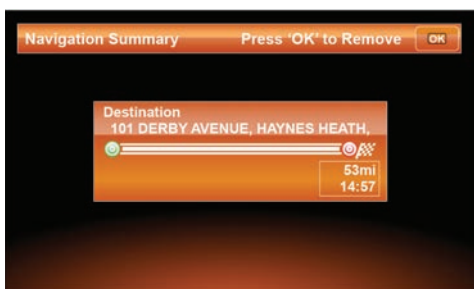

To view a summary of the currently set navigation route on a rear screen, select remote control button **(4)**.

Select **(21) OK** to return to the previous source.

Alternatively, the screen will default back to the previous screen after a few seconds.

*\* Availability depends on vehicle configuration.*


## CONNECTING PORTABLE MEDIA

Rear media USB/iPod sockets and AV sockets are located at the rear of the centre console. A 3.5 mm AUX socket is located in the cubby box. Connect a device to the appropriate socket.

Devices connected via the AUX socket have no touch screen control and must be operated as normal from the device.

USB devices must be connected with the cable supplied by the device manufacturer. USB devices must use FAT or FAT32 file format.

**NOTE:** Do not connect a non-audio device to the USB port.

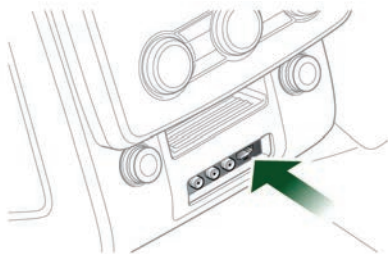

**Operating note.** For iPod audio playback, insert the connector into rear USB socket. For iPod audio with video, use the AV sockets. Disconnect when leaving the vehicle to prevent iPod battery discharge.

Older iPod devices may not be compatible. Consult your Land Rover Retailer/Authorised Repairer for details.

**NOTE:** iPod is a trademark of Apple Computer Inc., registered in the US and other countries.