


WARNING LAMPS

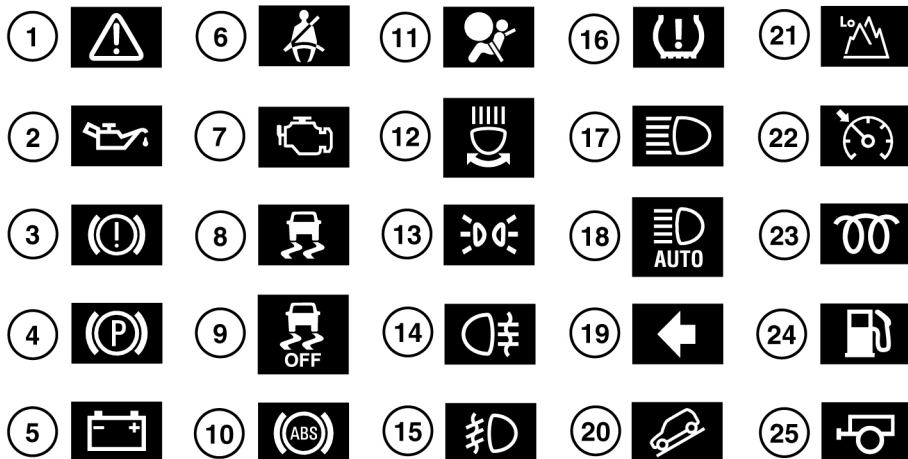

SL1666

1. Critical warning message - Red

Illuminates when a critical warning message is available in the message centre.

2. Low oil pressure - Red

Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started. If the lamp remains on, flashes, or illuminates whilst driving, stop the vehicle as soon as safety permits and switch off the engine immediately.

Check and top-up the oil level if necessary. Start the engine: If the lamp remains illuminated, switch the engine off immediately and seek qualified assistance before continuing.

3. Brake systems - Red

Illuminates briefly as a bulb check when the ignition is switched on. If the lamp illuminates whilst driving, suspect low brake fluid level or a fault with the Electronic Brake Distribution (EBD) system.

Stop the vehicle as soon as safety permits and check and top-up the brake fluid, if necessary. If the lamp remains illuminated, seek qualified assistance before continuing.

Brake systems - Amber

Illuminates briefly as a bulb check when the ignition is switched on. If the lamp illuminates after starting the engine or whilst driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system.

The vehicle can still be driven with care, but seek qualified assistance urgently.

4. Parking brake - Red

Illuminates when the parking brake is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.

5. Battery charge - Red

Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp remains on or illuminates whilst driving, there is a fault with the battery charging system. Seek qualified assistance urgently.

6. Seat belt - Red

Illuminates when the ignition is on an occupied front seat belt is unbuckled. The lamp should extinguish when the relevant seat belt(s) is buckled.

Beltminder - Red

If the vehicle is motion and the driver's seat belt or an occupied front seat passenger's seat belt is unbuckled, the seat belt warning lamp will illuminate and a chime will sound.

Note: The speed thresholds and the behaviour of the visual and audible warnings are dependent on market.

7. Engine malfunction - Red

Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp flashes or illuminates at any other time, there is a fault with the engine. Avoid high speeds and seek qualified assistance urgently.

8. Dynamic Stability Control (DSC)- Amber

Illuminates briefly as a bulb check when the ignition is switched on.

If the lamp flashes whilst driving, the DSC system is active.

If the lamp illuminates continuously whilst driving, there is a fault with the DSC system. The vehicle can still be driven, but the DSC system will not activate under wheel spin or slide conditions. Seek qualified assistance as soon as possible.

9. Dynamic Stability Control (DSC) off - Amber

Illuminates when DSC is switched off.

10. Anti-lock Braking System (ABS) - Amber

Illuminates briefly as a bulb check when the ignition is switched on.

If the lamp remains on or illuminates whilst driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

11. Airbag - Amber

Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the airbag system. Seek qualified assistance as soon as possible.

12. Adaptive front lighting system - Amber

Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly. Seek qualified assistance as soon as possible.

13. Side lamps - Green

Illuminates when the side lights are switched on.

14. Rear fog lamps - Amber

Illuminates when the rear fog lamps are switched on.

15. Front fog lamps - Green

Illuminates when the front fog lamps are switched on.

16. Tyre Pressure Monitoring (TPM) system - Yellow

Illuminates when one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

17. High beam - Blue

Illuminates when the high beam headlamps are switched on or flashed.

18. Auto high beam - Green

Illuminates when the auto high beam feature is enabled.

19. Direction indicators - Green

The appropriate warning lamp will flash when the direction indicators are operated.

20. Hill Descent Control (HDC) information

Illuminates continuously when HDC is selected and HDC operating conditions are met - i.e. vehicle speed below 50 km/h (30 mph).

If the lamp flashes, HDC has been selected, but the operating conditions are not being met (e.g. vehicle speed is too high) or HDC fade-out is occurring.

21. Low range - Green

Illuminates when Low range has been selected.

22. Cruise control active - Green

Illuminates when cruise control is active.

23. Diesel glow plugs active - Amber

Illuminates when the ignition is switched on to indicate that the glow plugs are active. Wait until the lamp extinguishes before starting the engine.

24. Low fuel warning - Amber

Illuminates when the remaining fuel reaches a minimum of 12 litres (3 gallons), giving an approximate range of 80 km (50 miles). Refuel at the earliest opportunity.

25. Trailer direction indicators - Green

Illuminates as a bulb check when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the direction indicator warning lamp. If the lamp fails to flash, the direction indicator bulb on the trailer may be faulty.