


INTERIOR LAMPS

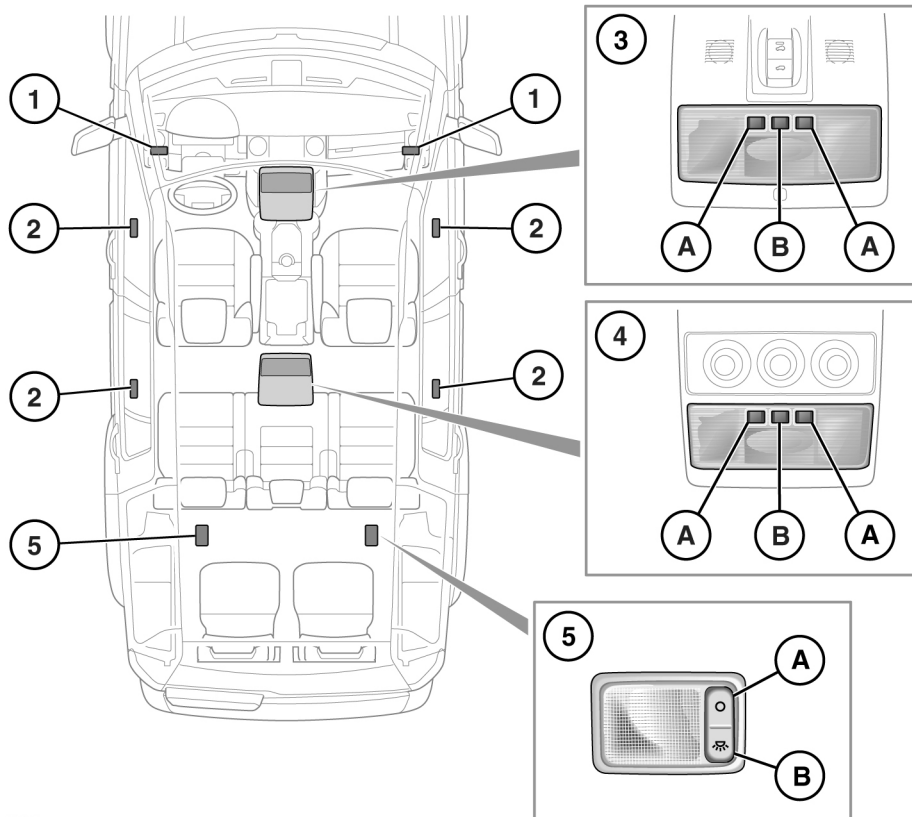

1. Sun visor lamps:

Switch on or off as required using the switch.

2. Puddle lamps:

Automatically illuminate when the doors are opened.

3. Map reading/interior lamps:

A. Map light controls (on/off).

B. Main interior lamp control (on/off/Auto).

To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode the lamps will illuminate when a door is opened.

4. Rear interior light control:

- A.** Map light controls (on/off).
- B.** Main interior lamp control (on/off/Auto).

To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode the lamps will illuminate when a door is opened.

5. Third row seating/loadspace interior lamps:

- A.** Press to turn off.
- B.** Press to turn on.