


# Video media player

## CONTROLS

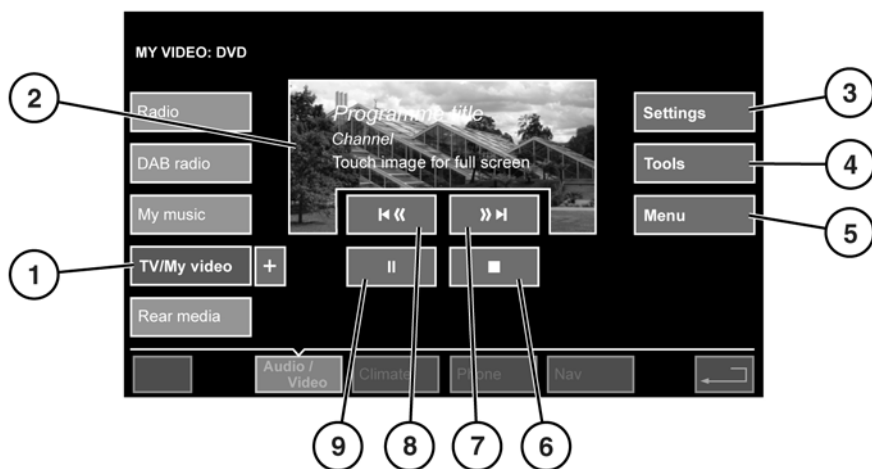

SJ1535

1. Select to view and select the desired video source (**DVD/CD/USB**) provided the relevant media is present.
2. Preview screen and video media information: Touch to select full screen mode.
3. Select to view the Settings menu.
4. Select to view the DVD tools options.
5. Select to view the DVD menu. This is replaced by a **Browse** soft key on some screens.
6. Select to pre-stop playback. A second touch will stop and reset the DVD.
7. Seek up: Select to view the next chapter on the video.
8. Seek down: Select to view the previous chapter on the video.
9. Select to pause/resume playback.

**Note:** For information on the use of the audio/video controls on the audio unit and steering wheel, see **86, AUDIO/VIDEO CONTROLS**.

### LOADING DVDs

- ! Do not force the disc into the slot.
- ! Do not use irregular shaped DVDs and DVDs with a scratch protection film or self-adhesive labels attached.
- ! Recordable (DVD-R or DVD+R) discs may not function correctly.
- ! Dual format, dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and consequently playback cannot be guaranteed, and jamming may occur.

It is recommended that only high quality 12 cm (4.7 in.) circular discs are used.

To locate the DVD load slot and the eject button, see **86, AUDIO/VIDEO CONTROLS**.

## VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

The video media can only be viewed from the driving position when the vehicle is stationary, with the gear selector in Park (P) and the parking brake applied.

If **P** is deselected or the parking brake is released, the touch screen will revert to the TV/My video menu and the relevant safety message will be displayed. If Dual view is fitted, a prompt for the passenger to activate dual view is displayed.

With video media selected for the passenger using the dual view feature, the video media display will remain once the vehicle is moving but any adjustments can only be made using the audio controls on the fascia or by using the dual view button. See **108, DUAL VIEW**.

## FULL SCREEN VIEW

The video media menu displays a small preview image of the video. Touch the preview image to select full screen mode. The video media controls and the playback status information are displayed for 5 seconds before disappearing.

Touch the screen again to view the controls and status information at any time.

To return to preview mode, touch and hold the full screen view.

## FULL SCREEN VIEW CONTROLS

The seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3**, **16:9** or **Zoom** option.

## SETTINGS

Depending on the video media specification, there are 2 sub-menus within settings: **Options** and **VOD** (Video On Demand). The **VOD** option allows you to access VOD content from a DVD or USB device. When the video is downloaded from the website, a registration code must be entered in order to watch the content. If an invalid code is entered, playback will be inhibited.

Touch the **VOD** soft key on the Settings screen to view the registration code.

## TOOLS

The tools menu contains the following options:

- Subtitles.
- Angle.
- Audio.
- GOTO.

The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title**.