


# Touch screen

## TOUCH SCREEN HOME MENU

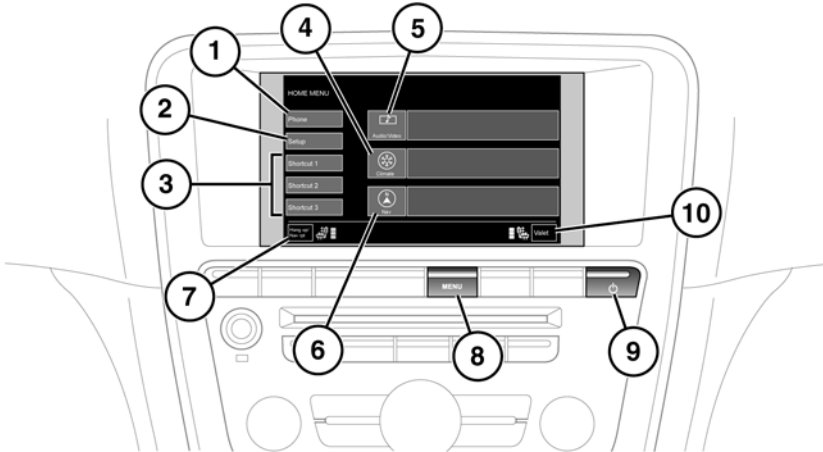

SJ1548

1. Touch to view the **Phone** menu.
2. Touch to view the touch screen **Setup** menu.
3. Home menu presets: 3 items can be selected as presets on the home menu. See **51, TOUCH SCREEN SETUP**.
4. Touch to select the **Climate** menu. Internal front left and right temperature settings and external temperature are shown alongside the soft key.
5. Touch to select the **Audio/Video** menu. An overview of current audio/video information is shown alongside the soft key.
6. Touch to select the **Navigation** menu. Current set destination is shown alongside the soft key.
7. Touch to end a call when using the phone, or to repeat the last given navigation instruction.
8. Press to return the touch screen to the **Home** menu.
9. Press to turn the touch screen on or off.

10. Touch to select **Valet** mode.

**Note:** To enter/exit Valet mode, the correct PIN will need to be entered. See **52, SELECTING VALET MODE**.

When an alternative menu is selected, short cut soft keys to the **Audio/Video**, **Climate**, **Phone** and **Nav** (navigation) menus appear along the bottom of the touch screen.

## TOUCH SCREEN USE

- ⚠ Always run the engine during prolonged use of the touch screen.

The buttons on the centre console, below the touch screen display, are referred to as **hard buttons** and should be pressed firmly. The touch screen buttons are referred to as **soft keys** and only require light pressure to function. Do not use excessive pressure.

## TOUCH SCREEN DISPLAY ICONS

Touch screen display icons are as follows (they may not all be displayed at the same time):



Audio/Video: Touch to select the Audio/Video menu.



Climate: Touch to select the Climate control menu.



Navigation: Touch to select the Navigation menu.



Back soft key: Touch to return to the previous screen displayed.



Shows the current status of the relevant heated/ventilated seat.

## TOUCH SCREEN CARE



Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Dealer/ Authorised Repairer.

## TOUCH SCREEN SETUP

- Select **Setup** from the Home menu.

Touch screen setup is split into 3 categories: **Screen**, **System** and **Vehicle**, as detailed below.

## SCREEN SETTINGS

- **Brightness/Contrast:** Select to adjust the touch screen brightness and contrast levels and to turn auto-dimming (for night driving) on or off.
- **Screensaver:** Select to change the screensaver. Touch an option to select.
- **Screen animations:** Select to turn animated transitions between screens on or off.

- **Time out to home menu:** Select to set the length of time before an unused screen reverts to the Home menu, or to turn this feature on or off.

## SYSTEM SETTINGS

- **Button feedback:** Select to turn the soft key use confirmation tone on or off.
- **Clock adjust:** Select to change the clock between 12 and 24 hour display. Use the arrow soft keys to alter the time.

Select **Date** to change the date, or to alter the date format (dd/mm or mm/dd).

Select **Set**, to store any changed settings.

- **Home menu shortcuts:** Select to choose the 3 items from the displayed list, that you wish to appear on the Home menu as shortcuts.

Touch an item from the list to select, select **Clear all** to deselect all items.

- **Language:** Select to change the vehicle Voice between **Male** and **Female** or to change the system language. Touch **Change** and select the desired language from the displayed list. Follow the on-screen instructions to confirm.
- **Volume presets:** Select to alter the volume for the various audible systems (traffic and news announcements, parking aid, phone etc.).

## VEHICLE SETTINGS

- **Ambience lighting:** Select to adjust the lighting level. Adjusting to the minimum level, turns ambience lighting off.
- **Valet mode:** Select to turn Valet mode on or off.

**Note:** To enter/exit Valet mode, the correct PIN will need to be entered. See **52**, **SELECTING VALET MODE**

## SELECTING VALET MODE

Valet mode allows the vehicle to be locked by a parking attendant, without giving access to the luggage compartment and glove compartment. Valet mode also prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

From the **Home** menu, select **Valet**:

Enter a four digit Personal identification Number (PIN) (personally chosen). On completion, touch the **OK** soft key.

If you wish to cancel the PIN, select **Delete**.

If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.

**Valet mode activated** is displayed to indicate that the PIN has been accepted.

The luggage compartment and glove box are now securely locked in Valet mode and the Valet mode On screen is displayed.

On exiting and securing the vehicle, hand the Jaguar Smart Key to the attendant.

## DESELECTING VALET MODE

When you enter the vehicle, touch the **Valet** button to view the Valet mode screen.

Enter your four digit PIN and touch the **OK** button.

**Valet mode deactivated** is displayed to indicate that your PIN has been accepted.

- The luggage compartment will return to the previously set security requirement.
- The glove box will now open as normal.
- The touch screen will be enabled.

**Note:** *If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.*