


## STARTING A PETROL ENGINE

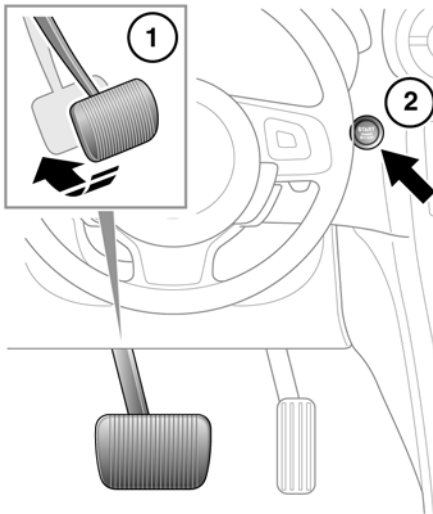

SJ1030

With the brake pedal applied (1) and with a valid Jaguar Smart Key in the vehicle, press and release the START/STOP button (2). The engine will start, the JaguarDrive selector will elevate out of the centre console and a drive gear can be selected.

## STARTING A DIESEL ENGINE

With the brake pedal applied and with a valid Jaguar Smart Key in the vehicle, press and release the START/STOP button. In ambient conditions, within 3 seconds, the engine will start to crank. The JaguarDrive selector will elevate out of the centre console.

In very cold conditions, expect engine cranking times to increase.

**Note:** *Smart Start in progress* is displayed in the message centre prior to the engine cranking. If, during the start procedure, the brake pedal is released, a gear change is made or if a fault occurs, **Smart Start cancelled** is displayed in the message centre and the start procedure is cancelled.

## SWITCHING ON THE IGNITION

To turn on the ignition without starting the engine, make sure the brake pedal is not applied and that there is a valid Jaguar Smart Key in the vehicle, then press and release the START/STOP button.

**Note:** *If the brake pedal is pressed when the START/STOP button is pressed, the engine will start.*

## STEERING COLUMN LOCK

If the steering column remains locked, even with a valid Jaguar Smart Key in the vehicle, **STEERING COLUMN LOCKED** is displayed in the message centre. If this occurs:

1. Press the START/STOP button to return to convenience mode.
2. Try again to unlock the steering column lock, by turning the steering wheel gently to the left and right.
3. If the malfunction still persists, seek qualified assistance as soon as possible.

## SWITCHING OFF THE ENGINE

With the gear selector in position **P**, press the engine START/STOP button. The engine will stop and the ignition system will return to convenience mode. The audio, telephone and touch screen systems will revert to stand-by mode and the JaguarDrive selector will retract into the centre console.

# Starting the engine

## IF THE ENGINE FAILS TO START

Seek qualified assistance as soon as possible.

**Note:** *If the brake pedal has been pumped prior to an attempt to start the engine, it may require greater pressure on the pedal in order for the engine to start.*

**Note:** *If the Jaguar Smart Key is placed in the door pocket, it may be outside the range of the sensors when the door is opened.*

## PETROL ENGINES

If the engine persistently fails to start, press the START/STOP button (without applying the brake pedal) to return the ignition to convenience mode. Slowly depress the accelerator pedal fully, hold it in this position and press the START/STOP button with the brake pedal applied, the engine will start to crank. Release the accelerator pedal when the engine starts.

If the engine still fails to start, consult your Dealer/Authorised Repairer.

## DIESEL ENGINES

If the engine persistently fails to start, press and hold the START/STOP button (with the brake pedal applied). Keep the START/STOP button and the brake pedal pressed until the engine starts, then release.

If the engine still fails to start, consult your Dealer/Authorised Repairer.

## SWITCHING OFF THE ENGINE WITH THE VEHICLE MOVING



**It is not advisable to switch off the engine whilst the vehicle is moving. However, should such a situation arise, then the following procedure applies.**

- Press and hold the engine START/STOP button for 2 seconds, or;
- Press the engine START/STOP button twice within 2 seconds.

In either case, the warning **Engine stop button pressed** will be displayed in the message centre.

## ROLLING RE-START

If the engine is switched off whilst the vehicle is moving, a rolling re-start can be initiated by selecting neutral and pressing the engine START/STOP button.