


# Lighting

## REMOVING A HEADLAMP

### CAUTION

! Do not place the removed lamp unit face down on hard or abrasive surfaces. Doing so may scratch the surface of the lens.




### Removing the grille

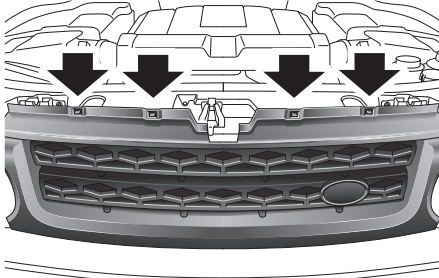

LAN2422

1. Press down on the four upper clips.
2. Lift the grille clear of the vehicle and place it where it will not become damaged.

### Removing the headlamp

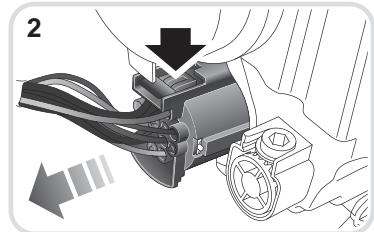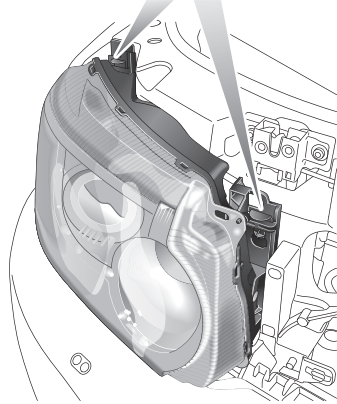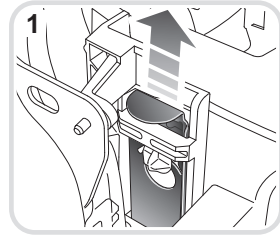


LAN2423

1. Carefully lever up the two locking bars.
2. Disconnect the wiring plug from the back of the unit and remove the unit from the vehicle.
3. Place face down on a flat surface covered in a soft material to prevent damage to the unit's lenses.

# Lighting

## Refitting the headlamp

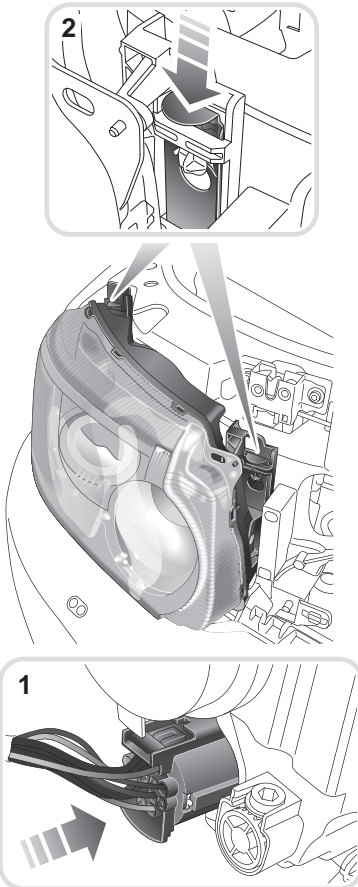

LAN2424

1. Reconnect the wiring plug.
2. Offer up the unit into position.
3. Push down on the two locking bars.

## Refitting the grille

### CAUTION

⚠ To prevent damage to the headlamps, make sure that the locating tags on the grille are correctly aligned to the slots in the headlamps.

1. Refit the grille, aligning the upper and lower clips with their respective slots, and press into place.
2. Ensure the clips have sprung into place securing the grille.