


# Compact disc player (touch screen)

## COMPACT DISC PLAY OPTIONS

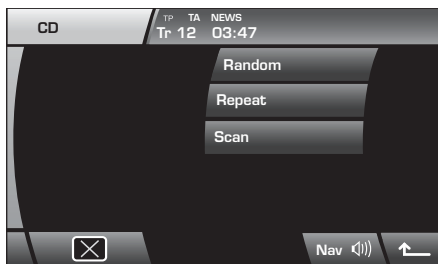

LAN2470

The following compact disc play options are available from the **Settings** menu.

- Random
- Repeat
- CD scan

Touch the icon for the required compact disc play option.



LAN2471

Only one option can be active at a time with the currently selected option shown in the information area of the display.

The currently selected disc play options are automatically cancelled when a different audio source is selected or when the audio unit is switched off.

## Random

Selecting **Random** alters the playback order for the current CD so that tracks are played in a random sequence.

Random playback can be cancelled by deselecting the option under the **Settings** menu.

## Repeat

Selecting **Repeat** will play the current track repeatedly. Deselect the option to cancel repeat and resume normal play.

**Note:** Repeat can be cancelled by pressing the track up or track down button.

## CD Scan

Selecting CD **Scan** allows you to sample the music on a compact disc. This option plays the first ten seconds of each track in numerical order. Play will then begin at the start of track one.

**Note:** CD scan can be cancelled by pressing the track up or track down button.