

# Radio (standard)

---

## News announcement volume

News announcements interrupt normal broadcasts at a preset minimum level that is usually louder than normal listening volumes. To adjust the preset volume, use the volume control to make the necessary adjustment during an incoming news broadcast. The display will show the level selected.

## TIME AND DATE SETTINGS

To set/change the time and date, navigate to **Clock** on the menu.

Navigate to **Set time** to set the time or navigate to **Set date** to set the date and press **OK**.

### Time

Use the up and down arrow icons to increase or decrease the hours and minutes.

Once the correct time has been set, press the **OK** button to confirm the changes.

Navigate to **24h mode** to select the time format, press the **OK** button to confirm the change.

### Date

Use the up and down arrows to increase or decrease the year, month and date as required.

Once the correct format and date have been set, touch the **OK** icon to confirm the changes.

Navigate to **Set date format** to select the date format, press the **OK** button to confirm the change.