

# Keys and remote controls

## Panic alarm



Press and hold for three seconds, or press three times within three seconds, to activate the emergency alarm. The horn, siren and the hazard lamps will operate.

If the emergency alarm has been active for more than five seconds, it can be cancelled by either pressing and holding the button for three seconds, or pressing the button three times within three seconds.

The emergency alarm will also be cancelled if the vehicle detects a valid Smart Key when the START/STOP button is pressed.

## Care of the Smart Key

Do not expose to extremes of heat, dust, humidity or allow contact with fluids. Do not leave the transmitter exposed to direct sunlight.

## Irregular operation

If difficulty is experienced with remote keyless entry, keyless starting or Smart Key operation, it may be caused by:

- Internal battery low voltage. Replace the battery. See **CHANGING THE SMART KEY BATTERY** (page 17).
- High levels of localised external electrical interference, e.g. a radio transmitter.

Until the battery can be replaced, or until the vehicle is outside the area of electrical interference, the emergency key blade will need to be used to unlock the vehicle. Although this will allow you to access the vehicle, it will not disarm the alarm or allow you to start the engine. See **USING THE EMERGENCY KEY BLADE** (page 21).

## UNLOCKING AND DISARMING THE VEHICLE



Your vehicle can be unlocked using either Single or Multi-point entry. Single-point entry is a security feature that only unlocks the driver's door when the unlock button is pressed.

To change from Single to Multi-point entry (or vice versa), press both the lock and unlock buttons simultaneously for three seconds. The hazard warning lamps will flash twice to confirm the change.

This change can also be set via the **Vehicle Set-up** menu. See **VEHICLE INFORMATION AND SETTINGS MENU** (page 33).

### Single-point entry

**First press:** Unlocks the driver's door and fuel filler flap. All other doors can be opened from the inside (unless the child safety locks have been activated on the rear doors). The hazard warning lamps will flash twice, to indicate that the vehicle is unlocked and the alarm has been disarmed. The interior lamps will illuminate to assist entry to the vehicle.

**Note:** *In some markets, an audible warning will sound.*

**Second press:** Unlocks the passenger doors and the luggage compartment.

### Multi-point entry

Press briefly to unlock all the doors, fuel filler flap and luggage compartment. The hazard warning lamps will flash twice to indicate that the vehicle is unlocked and the alarm has been disarmed. The interior lamps will illuminate to assist entry to the vehicle.

**Note:** *In some markets, an audible warning will sound.*