


Maintenance

UNDER BONNET COVERS

Removal

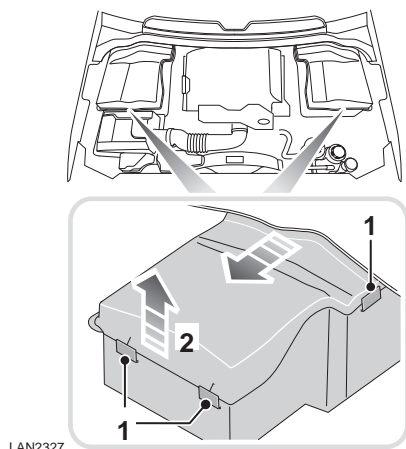


1. Press the tabs to release the cover from the casing.

Note: *Releasing the inboard tab on the front edge of the cover first will make it easier to release the other tabs.*

2. Lift the front edge of the cover and slide forwards to remove.

Fitting

CAUTION

 Before refitting the underbonnet covers, ensure that no pipes, cables, or other items have been trapped between the cover and casing.

1. Slide the rear edge of the cover under the rubber trim fitted to the scuttle panel.
2. Make sure the front edge of the cover is flush to the casing and then press down until the tabs click into place.

ENGINE OIL

Low oil pressure warning indicator



Illuminates red as a bulb check when the ignition is switched on and extinguishes when the engine is started. If the indicator remains on, flashes on and off, or illuminates whilst driving, stop the vehicle as soon as safety permits and switch off the engine immediately. Check the oil level and seek qualified assistance if necessary.

Specification

Variant	Specification
Diesel vehicles	SAE 5W-30 meeting specification WSS-M2C934-B only ¹
V6 Petrol vehicles	SAE 5W-30 meeting specification WSS-M2C913-C only ²
V8 Petrol vehicles	SAE 5W-20 meeting specification WSS-M2C925-A only

¹ If you are unable to find an oil that meets the specification defined by WSS-M2C934-B, an SAE 5W-30 engine oil meeting specification ACEA:C2 can be used.

² If you are unable to find an oil that meets the specification defined by WSS-M2C913-C, an SAE 5W-30 engine oil meeting specification ACEA:A3/B3 can be used.

Land Rover recommends:

