


Fuses

FUSE BOX LOCATIONS


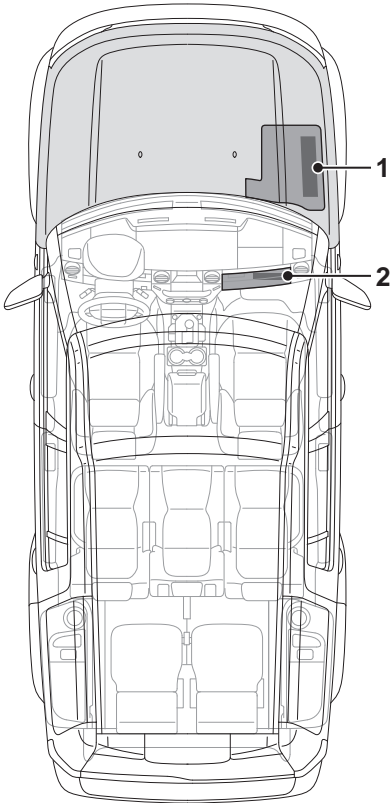


LAN2367

1. Engine compartment fuse box.
2. Passenger compartment fuse box.

Note: *The engine and passenger compartment fuse boxes are always fitted on the passenger side of the vehicle.*

Engine compartment fuse box

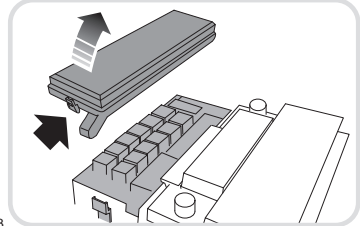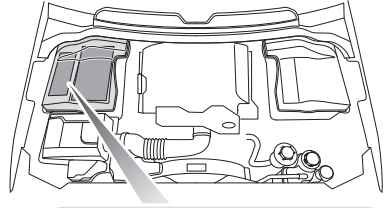

LAN2333

Remove the plastic cover by pressing the tabs. The fuse values and locations and the circuits protected are shown on the plastic cover.