



Fuses

FUSE BOX LOCATIONS

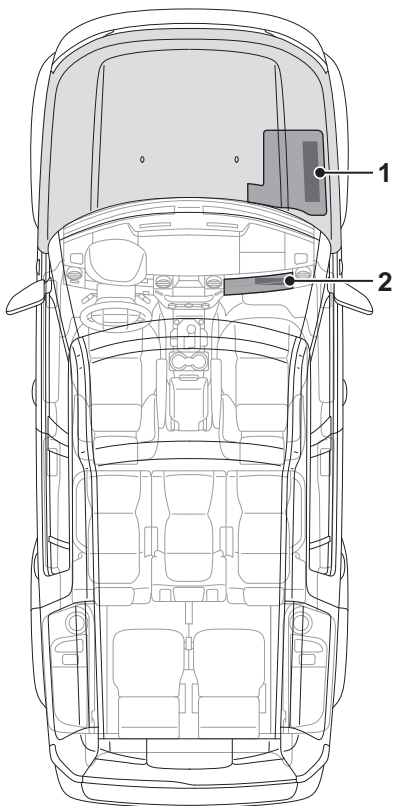

LAN2367

Engine compartment fuse box

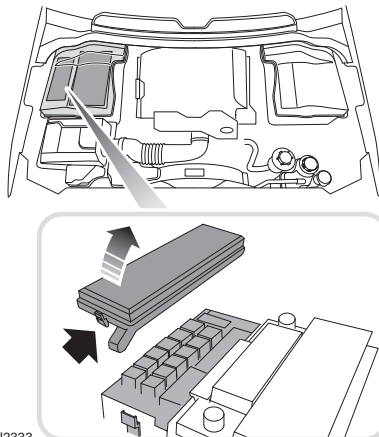

LAN2333

Remove the plastic cover by pressing the tabs.
The fuse values and locations and the circuits protected are shown on the plastic cover.

1. Engine compartment fuse box.
2. Passenger compartment fuse box.

Note: The engine and passenger compartment fuse boxes are always fitted on the passenger side of the vehicle.