

Audio system overview

TOUCH SCREEN CARE

Care points

The touch screen allows control of all the Infotainment systems from a single point. To ensure that it continues to operate correctly, some basic care points are listed below.

- Clean only with a lightly moistened soft cloth.
- Do not use chemical agents, or domestic cleaners, to clean any part of the touch screen or its surround.
- Only use your finger to operate the touch screen. Ensure that only one finger at a time is in contact with the screen, to prevent incorrect entries.
- A short, light press is sufficient to operate functions. Do not use excessive pressure.
- Do not allow any sharp, hard or abrasive objects to come into contact with the screen.
- Where possible, avoid exposing the touch screen to direct sunlight for long periods.

Note: *None of the functions of the touch screen are operated by dragging icons.*

SWITCHING THE SYSTEM ON



To switch on the system, press the On/Off button.

The first time the touch screen audio system is switched on, the home menu will be displayed. Switching the system on subsequently, will display the screen or menu that was in use when the system was switched off.

TURNING OFF THE TOUCH SCREEN



The touch screen display can be turned off without turning off the audio system by touching the display off icon on the screen.

Touch the screen to turn the display back on.