


Fuses

Passenger compartment fuse box

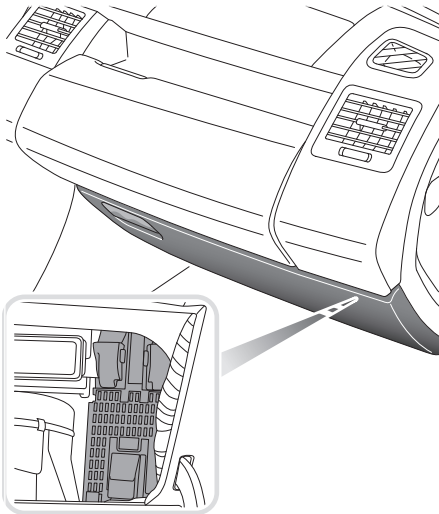

The passenger compartment fuse box is fitted behind the glove box. To access the fuses, open the glove box and then pinch the top of the support stays, and lower the glove box into the footwell.

A label on the rear of the glove box shows the circuits protected, the fuse values and their locations.

CHANGING A FUSE



CAUTIONS

- ! Always switch off the ignition, and the affected circuit, before replacing a fuse.
- ! Fit Land Rover approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse may result in damage to the vehicle's electrical system and can result in a fire.

CAUTIONS

- ! If the replacement fuse blows after installation, the system should be checked by your Land Rover dealer.
- ! No attempt should be made to repair a fuse which has blown.

A blown fuse is indicated when the electrical equipment it protects stops working.

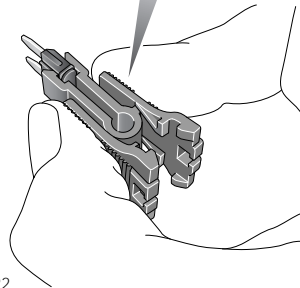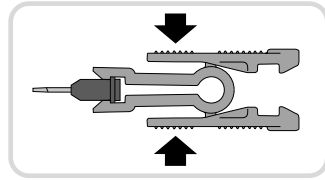

E81022

The fuse removal tweezers are located in the passenger compartment fuse box. Place the tweezers onto the head of the suspect fuse (as shown), squeeze the middle (arrowed) and pull to remove. A break in the wire inside the fuse indicates that the fuse has blown.

Note: Owners are advised against removing or replacing the relays (identified as **R1-R19** on the relays) and fusible links (identified as **FL1-FL20** on the fusible links) in the engine compartment fuse box. Failure of any of these items should be investigated by a qualified technician.