

# Climate control

## ELECTRIC SUNROOF

### WARNINGS



Extreme care must be taken to ensure that none of the occupants have any part of their body in a position where it could be trapped by the closing sunroof. Although an anti-trap mechanism is fitted, serious injuries can occur.




For their safety, when leaving children unattended in the vehicle always remove the Smart Key.

### CAUTION



Wherever possible, remove any snow, ice, dirt and leaves etc. from the sunroof before closing. Failure to do so may damage the sunroof mechanism.

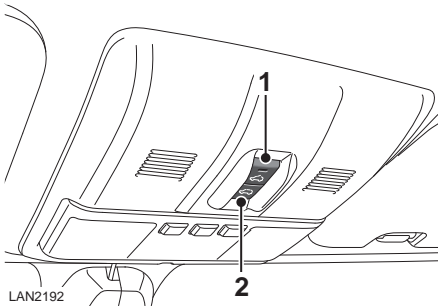

The sunroof can be operated whenever the ignition is switched on and for 30 seconds after the ignition is switched off, provided that a front door is not opened.

- To open the sunroof to the tilted position, briefly press switch **1**. The roof will move to its tilted position.
- To fully open the sunroof from the tilted position, briefly press switch **1** again.

- To close the sunroof to the tilted position, briefly press switch **2**.
- To close the sunroof fully, press and hold the switch **2**. Releasing the switch before the roof is fully closed will stop movement.

**Note:** While the sunroof is moving, a further press of the switch will stop the movement.

**Note:** If the ignition is not switched on, the switch has to be pressed and held to operate the sunroof.

### Anti-trap mechanism

#### WARNING



The anti-trap mechanism does not operate when closing the roof from the tilted position. The sunroof can cause serious injury should a body part become trapped. Always ensure that the sunroof is free from obstructions before closing.

If the sunroof encounters resistance while closing, the operation is interrupted and the roof opens slightly, to prevent the sunroof trapping vulnerable parts of the body or other obstructions.

It is possible to override the anti-trap mechanism when movement is restricted by ice or dirt, by pressing and holding the front of the switch whilst the roof is closing.

# Climate control

---

## Sunroof calibration

If the battery is disconnected when the sunroof is open, the sunroof may need to be re-calibrated, as follows:

1. With the battery connected, switch the ignition on.
2. Press and hold the front of the switch for 20 seconds. The sunroof will start to move. Continue to hold the switch until the sunroof completes one full open and closing cycle. When the sunroof stops moving, release the switch.

The sunroof can then be operated as normal.

**Note:** Calibration will not function if the battery voltage is too low.