

# Seats

## DRIVER'S SEAT MEMORY FUNCTION

### WARNING



Before activating the seat memory, ensure that the area immediately surrounding the seat is clear of obstructions and that all occupants are clear of moving parts.



LAN2211

The vehicle can memorise up to three different driver seat, exterior mirrors and steering column positions. This enables three different drivers to achieve optimum comfort at the touch of a button.

### Saving a memory position

1. Switch the ignition on.
2. Adjust the seat, exterior mirrors and steering column to the desired position.
3. Press the memory store button **M** to activate the memory function. The indicator will illuminate.
4. Within five seconds, press the desired pre-set button (**1**, **2** or **3**).
5. **Memory (1,2 or 3) settings saved** will be displayed on the message centre and a single chime will sound to confirm.

### Recalling a stored memory position

Press the pre-set button associated with the desired driving position. The seat, exterior mirrors and steering column will move to the position stored on that pre-set. **Memory (1, 2 or 3) settings recalled** will be displayed on the message centre.

**Note:** To stop memory movement at any time, press any seat adjustment control.

### Entry and exit mode

Entry and exit mode provides automatic movement of the steering column and driver's seat making it easier to enter or exit the vehicle.

This feature can be enabled by setting the steering column adjustment switch to the AUTO position. See **ADJUSTING THE STEERING COLUMN** (page 73).

### Exit

If the driver's door is opened, the steering column will move to the uppermost tilt position unless already in that position. The driver's seat height will move down unless already at or below the exit position.

### Entry

When the driver's door is closed and the ignition is switched on, the steering column and driver's seat will return to the previous position.

**Note:** If the steering column or driver's seat is adjusted during entry or exit operation, automatic movement will stop.