

# Voice control

---

## DISPLAY COMMANDS

This is a list and a description of the voice commands used to operate the touch screen.

Command	Description
DISPLAY ON	Turns the touch screen on.
DISPLAY OFF	Turns the touch screen off.
DISPLAY SHOW AUDIO	The Audio home screen is displayed.
DISPLAY SHOW PHONE	The Phone home screen is displayed.
DISPLAY SHOW NAVIGATION	The Navigation main menu is displayed. <i><b>Note:</b> The navigation caution must be accepted before the menu is displayed.</i>

## NOTEPAD COMMANDS

The notepad facility enables the user to record a note, up to a maximum of 30 seconds duration, which can be subsequently recalled.

***Note:** To hear information on notepad commands, press the Voice button, wait for the tone to sound and then say **NOTEPAD HELP**.*

### Recording a note

1. Press and release the Voice button, wait for the tone to sound, then say **RECORD NOTE**.
2. Say the words of the note to be recorded, then press and hold the Voice button to end and save the note.

***Note:** The maximum length of a note is 30 seconds, after which time the recording of the note will be ended automatically.*

### Playing a note

Press and release the Voice button, wait for the tone to sound, then say **PLAY NOTEPAD**. If multiple notes are stored on the system, press and release the Voice button during playback and say **NEXT**, to skip to the next note.

### Deleting notes

To delete an individual note, press and release the Voice button during playback of the note to be deleted and say **DELETE**.

To delete all notes stored on the system, press and release the Voice button and say **CLEAR NOTEPAD**.