



Filling station information

TYRE PRESSURES

Air pressure naturally increases in warm tyres; if it is necessary to check the tyres when they are warm (after the vehicle has been driven for a while), you should expect the pressures to have increased by up to 30 - 40 kPa (0.3 - 0.4 bar) (4 - 6 lbf/in²). In this circumstance, Do not let air out of the tyres in order to match the recommended cold tyre pressures. See **TYRE CARE** (page 243).

Tyre pressure labels

The correct tyre pressures are shown on a label attached to the driver's door

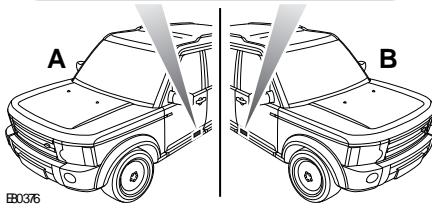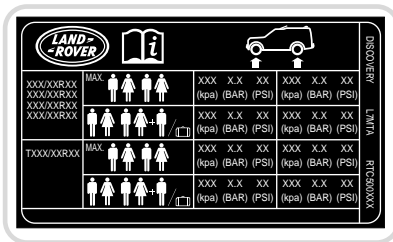

- A. Left-hand drive vehicle
- B. Right-hand drive vehicle

Temporary spare wheel

The tyre pressure in the temporary spare wheel/tyre should be maintained at 420 kPa (4.2 bar/60 lbf/in²) for all loading conditions.

ENGINE OIL SPECIFICATION

Variant	Specification
Diesel vehicles	SAE 5W-30 meeting specification WSS-M2C934-B only ¹
V6 Petrol vehicles	SAE 5W-30 meeting specification WSS-M2C913-C only ²
V8 Petrol vehicles	SAE 5W-20 meeting specification WSS-M2C925-A only

¹ If you are unable to find an oil that meets the specification defined by WSS-M2C934-B, an SAE 5W-30 engine oil meeting specification ACEA:C1 can be used.

² If you are unable to find an oil that meets the specification defined by WSS-M2C913-C, an SAE 5W-30 engine oil meeting specification ACEA:A3/B3 can be used.

Land Rover recommends:



ENGINE COOLANT SPECIFICATION

Top-up to the upper level indicator mark located above the **COLD FILL RANGE** text, on the side of the expansion tank. Use only a 50% mix of water and Castrol SF antifreeze. See **ENGINE COOLANT CHECK** (page 215).

Index

A

- ABS driving hints 142
- Accessories 11
- Adaptive front lighting system (AFS) 80
 - Cornering lamps 81
- Adjusting the headlamps 80
 - Headlamp beam adjustment 80
- Adjusting the steering wheel 73
- Adjusting the suspension 172
 - Access height 173
 - Access height from off-road height 173
 - Additional lift whilst in extended mode 175
 - Automatic height change warnings 174
 - Crawl mode (locked at Access height) 173
 - Door open override 174
 - Extended mode 175
 - Remote operation 178
 - Suspension freeze 175
 - Suspension height indicators 172
- Adjusting the windscreen washer jets 98
 - Front 98
 - Rear 98
- AFS 80
- Air conditioning 108
- Air suspension
 - Principle of operation 171
- Air suspension messages 176
- Air vents 105
 - Intake air 106
 - Third row seats vent 106
- Airbag service information 65
- Airbag warning lamp 64
- Alarm
 - Principle of operation 26
- Alarm sensors 34
- Answer telephone call 340, 346
- Antifreeze 215
- Arming 16
- Arming the alarm 26
 - Anti-theft alarm indicator 26
 - Interior space protection 26
 - Perimetric alarm 26
- Ashtray 118
- Audio controls 75, 310
- Audio unit overview 286
 - Standard audio system controls 286
 - Touch screen audio system controls 287
- Auto high beam 77
- Automatic climate control 107
 - General notes 110
 - Operation of controls 108
- Automatic transmission 132
 - CommandShift™ 134
 - Electronically selected automatic modes 135
 - Kick-down in automatic mode 133
 - Messages 136
 - Selector lever positions 132
 - Sport mode 134
- Auxiliary connections 328
 - Connecting a USB device 329
 - Connecting an iPod 328
 - Connecting more than one device 329
 - Portable audio overview 328
- Auxiliary heater 111
- Auxiliary heating
 - Remote operation 114
- Auxiliary input (AUX IN) socket 332
 - Auxiliary mode 333
- Auxiliary input devices 330
 - Displaying track information 330
 - Playing a portable device 330
 - Portable device settings 331
 - Searching a portable device 331
- Auxiliary power sockets 119
 - Front auxiliary power socket 119
 - Rear auxiliary power sockets 119

Index

B		C	
Battery care	222	Call register.	349
Check and replenish battery electrolyte	223	Camera	147
Battery charging	225	Car wash	200
Battery warning symbols	222	Care of touch screen	288
Bi-Xenon headlamps	76	Catalytic converter	185
Bluetooth setup	345	Centre console	121
Bluetooth operation	345	Card holder	121
Bonnet lock	206	CD storage	121
Bonnet opening and closing	206	Changing a bulb	85
Booster cables	223	Bulb access	86
Boosting from another vehicle	224	Courtesy lamp bulb	93
Boosting procedure	224	Front fog lamp bulb	90
Booster cushions	72	Front indicator lamp bulb	89
Brake fluid check	216	Front sider lamp bulb	89
Checking the fluid level	217	Headlamp bulb (Halogen)	87
Topping up the fluid	217	Headlamp bulb (Halogen) low beam	88
Brakes		Headlamp bulb (Xenon)	87
Principle of operation	140	Licence plate lamp bulb	92
Bulb changing	85	Map lamp bulb	93
Front fog lamp	90	Rear lamp bulb	92
Headlamp	86	Side repeater lamp bulb	91
Headlamp - Halogen high beam	88	Static bending bulb	88
Headlamp - Halogen low beam	87	Stepwell lamp bulb	93
Headlamp - Xenon	87	Tailgate lamp bulb	93
Interior lamps	93	Vanity mirror lamp bulb	94
Rear fog lamp	92	Changing a fuse	257
Rear lamp	92	Changing a road wheel	230
Side repeater lamp	91	Changing a wheel	240
Bulb specification chart	94	Raising the vehicle (Air suspension)	234
		Raising the vehicle (Coil suspension)	237
		Spare wheel	232
		Stowing the changed wheel	242
		Using wheel chocks	234
		Wheel changing safety	230
		Changing the remote control battery	17
		Changing the vehicle battery	226
		Battery disposal	227
		Battery replacement	227
		Changing the wiper blades	99
		Front	99
		Rear	100
		Channel automatic tuning	311

Index

- Channel options 314
 DAB search 315
 Finding a channel 314
 Finding a subchannel 314
 Finding an ensemble 315
Charging the vehicle battery 225
 Battery warning indicator 226
 Effects of battery disconnection 227
Check engine 156
Checking the oil level 210, 211
Checking the wiper blades 99
Child safety locks 72
Child seat positioning 68
 ISOFIX child seat positions 69
 Recommended ISOFIX child seats 69
Child seats 66
 Child restraint checklist 67
 Seat belt automatic locking mechanism 67
Cigar lighter 118
Cleaning the alloy wheels 201
Cleaning the exterior 200
 Cleaning after off-road driving 200
 Glass and mirrors 201
 Polishing 201
 Removing tar spots 200
 Underbody maintenance 201
 Washing the vehicle 200
Cleaning the interior 201
 Airbag module covers 202
 Carpet and fabrics 202
 Instrument pack, clock and audio unit 202
 Leather 202
 Plastic and cloth 202
 Seat belts 202
Climate control 107
 Rear passenger 111
 Timed 112
Clock 290, 301
Coded keys 25
Compact disc pause 324
Compact disc play options 325
Compact disc player
 CD compatibility 319, 322
 Loading CDs 320, 323
Controls, radio 303
Controls, steering wheel 74
Cool box 122
Coolant 215, 356
Coolant check 215
Cruise control 75, 158
 Increasing cruising speed 159
 Principle of operation 158
 Reducing cruising speed 159
 Suspending cruise control 159
Cup holders 120
Curtain airbags 61
D
Dashboard 28
Date and time 290
Daytime running lamps 76
Detachable tow ball 197
 Fitting the tow ball 197
 Removing the tow ball 198
Dialling 346
Dialling from the phone book 348
Diesel Particulate Filter (DPF) 157
Digital audio broadcasting
 General information 308
Dipstick - electronic 212, 213
Direction indicators 82
Disabling the passenger airbag 62
 Airbag switched OFF 63
 Airbag switched ON 64
 Passenger airbag status indicator 63
Disarming 15
Display options 312
 DAB radio text 312
 Touch-screen information panel 312
Display settings 290
Drive away locking 34
Driving after a collision 263
 Before starting or driving 263
 When driving 263

Index

- E**
- Economical driving 156
 - Driving tips for fuel economy 156
 - Maintenance and fuel economy 156
 - Ejecting compact discs 320, 323
 - Electric exterior mirrors 102
 - Folding the mirror body 103
 - Mirror glass adjustment 102
 - Reverse mirror dipping 103
 - Electric parking brake (EPB) 143
 - Applying the electric parking brake 143
 - Dynamic operation 144
 - Messages 146
 - Releasing the electric parking brake 144
 - Electric seats 42
 - Folding armrest 43
 - Electric sunroof 115
 - Anti-trap mechanism 115
 - Sunroof calibration 116
 - Electric windows 101
 - Anti-trap mechanism 101
 - One touch operation 101
 - Operating the windows 101
 - Rear window isolation switch 102
 - Rear window operation 102
 - Emergency key blade 17, 21
 - Ending a telephone call 340, 346
 - Engine compartment overview 207, 208
 - Engine coolant check 215
 - Checking the coolant level 215
 - Topping up the coolant 215
 - Engine immobiliser
 - Principle of operation 25
 - Engine number 269
 - Engine oil 209
 - Engine oil check 210, 211, 213
 - Checking the oil level 210, 212
 - Engine oil consumption 211, 213
 - Engine oil specification 209, 356
 - Topping up the oil 210, 212
 - Engine systems fault 156
 - EPB 143
 - Essential towing checks 195
 - Event data recording 10
 - Exterior mirrors 102
- F**
- Facia overview 28
 - Fastening the seat belts 56
 - Releasing the belt 56
 - Filling station information
 - Engine coolant specification 356
 - Fuel filler flap 355
 - Refuelling 355
 - Tyre pressures 356
 - Fog lamps
 - Front 79
 - Rear 79
 - Folding the seats 47, 51
 - Front fog lamps 79
 - Fuel
 - Petrol fuel guard 183
 - Fuel burning heater 111
 - Fuel consumption 186
 - Fuel consumption figures 186
 - Fuel cut-off 185
 - Resetting the fuel cut-off system 185, 263
 - Fuel filler flap 182, 355
 - Fuel guard 183
 - Fuel quality 179
 - Alternative fuels for petrol engines 180
 - Diesel engined vehicles 181
 - Petrol engined vehicles 180
 - Fuel specification 355
 - Fuse box locations 256
 - Engine compartment fuse box 256
 - Passenger compartment fuse box 257
 - Fuse specification chart 258
 - Engine compartment fuse box 258
 - Passenger compartment fuse box 260

Index

G

Gauges	37
Fuel gauge	37
Tachometer	37
Temperature gauge	37
Gear changing	195
Gear selection	134
General driving points	154
Breakdown safety	155
Extreme driving conditions	154
Vehicle stability	154
Wading	154
General information on radio frequencies	13

H

Handset	14
Battery	17
Key blade	17
Hazard warning flashers	79
HDC	163
Hill Descent Control faults	165
Hill Descent Control in action	164
Messages	165
Head restraints	45
Front head restraints	45
Rear head restraints	46
Headlamp adjustment	80
Headlamp bulb	85
Headlamp delay	34
Headlamp power wash	98
Headlamp washers	98
Headlamps	
High and low beams	77
Headphones	327
Heated mirrors	110
Heated seats	52
Heated steering wheel	74
Heated windows and mirrors	110
Exterior mirrors	110
High beam assist	34
Hill descent control	163
Hill descent control (HDC)	
Principle of operation	163

Hints on driving with ABS	142
ABS and off-road driving	142
ABS warning indicator	142
Cornering Brake Control (CBC)	143
Electronic Brake Distribution (EBD)	143
Emergency Brake Assist (EBA)	143
HomeLink®	124
Accessories	126
Compliance	126
Erasing channels	126
Operation	125
Precautions	124
Programming	125
Rolling codes	126
Horn	75

I

Ignition	129
Information messages	30
Critical warning messages	30
Gear selector display	32
Information messages	30
Service interval indicator	32
Warnings messages	30
Inspecting safety system components	264
Instrument lighting dimmer	117
Instrument panel overview	36
Interior lamps	
Front interior lamps	82
Rear interior lamps	82
Interior mirror	104
Automatic dimming mirror	104
Manual mirror	104
iPod connection	328
ISOFIX anchor points	70
Tether strap anchorages	71

J

Jacking points	234, 237
Jump starting	223

Index

- K**
- Keyless entry 23
 - Smart Key check 23
 - Keyless locking 24
 - Steering column lock 24
 - Keyless starting 130
 - Backup procedure 131
 - If the engine fails to start 130
 - Keys
 - Emergency key blade 17, 21
 - Keys and remote controls
 - Principle of operation 13
- L**
- Lamps interior 82
 - Lamps master switch 77
 - Language settings 289
 - Lashing points 267
 - Last dialled numbers menu 349
 - Last number redial 346
 - Levelling 194
 - Licence plate lamp bulb 92
 - Lighting
 - General information 76
 - Lighting control 77
 - Automatic control lamps 78
 - Headlamp courtesy delay 78
 - High and low beam headlamps 77
 - Side lamps 77
 - Load carrying
 - General information 187
 - Loading compact discs 320, 323
 - Loading a CD (player empty) 323
 - Locking 16
 - Locking and unlocking 19
 - Automatic unlocking 19
 - Interior door handles and door locking levers 19
 - Master lock and unlock switches 19
 - Mislock 16
 - Opening the tailgate 20
 - Speed-related locking 19
 - Using the emergency key blade 21
 - Valet mode 291
 - Low line audio
 - Radio controls 296
 - Tone adjustment 297
 - Luggage anchor points 187
 - Luggage covers 188
 - Operating the luggage cover 188
 - Removal and refitting of luggage cover 189
- M**
- Maintenance
 - General information 204
 - Technical specifications 220
 - Manual seats 41
 - Manual transmission 132
 - Memory function 44
 - Entry and Exit mode 44
 - Recalling a stored memory position 44
 - Saving a memory position 44
 - Messages
 - Information 30
 - Mirror
 - Interior 104
 - Mirrors
 - Exterior 102
 - Mirrors heated 110
 - Missed calls 349
- N**
- News information 307
 - Notepad commands 336
- O**
- Oil check 210, 211, 213
 - Oil level check 212, 213
 - Opening and closing the bonnet 206
 - Closing the bonnet 206
 - Opening the bonnet 206

Index

P

Paint damage	203
Parking aid	152
Front parking aid - manual operation	153
Principle of operation	152
System fault	153
Towing	153
Passenger airbag disable	62
Personalised settings	33, 289
Petrol fuel guard	183
Phone book	347
Dialling	348
Display	347
Scroll	348
Search	348
Phone controls	343
Phone display	344
Phonebook	
Phonebook	348
Portable audio interface	328
Portable devices	330
Power steering fluid check	218
Checking the fluid level	218
Topping up the fluid	218
Power wash headlamp	98
Preset buttons	313
Recalling a preset channel	313
Storing channels as presets	313
Principle of operation	
Access height	171
Battery-backed sounder	26
Crawl mode	172
Extended mode	171
Foot brake	140
High speed height	172
Messages	141
Off-road height	171
Operation	171
Vehicle security	26
Priority programme type (PTY)	307
Proximity cameras	148

R

Radio controls	303
Radio data system (RDS)	299, 305
Radio operation	
Band selection	297, 304
manual tuning	298, 304
Presets	298, 304
Seeking stations	304
seeking stations	298
Selecting preset stations	298, 304
station auto store	304
Radio reception	295, 302
Rain sensor	96
RDS	
Information broadcasts	306
news information	307
selecting traffic information	299, 306
Rear fog lamps	79
Rear lamps	85
Rear loadspace hatches	187
Rear passenger climate controls	111
Rear seat audio controls	326
Rear seats	46
Second row seats - 7-seat vehicle	48
Second-row seats - 5-seat vehicle	47
Third-row seats	50
Rear view camera system	147
principle of operation	147
Rear window wiper and washers	97
Reversing	98
Tailgate open disable	98
Washer	97
Wiper - continuous operation	97
Wiper - intermittent operation	97
Recommended towing weights	196
Towing weights - Australia only	196
Reduced engine performance	156
Refitting the vehicle battery	227
Refuelling	183, 355
Rejecting telephone call	340, 346

Index

Remote control	14	Settings	33, 316
Approach lighting	14	Announcements	316
Care of the Smart Key	15	Audible feedback	290
Emergency key blade	17	audio system	289
Irregular operation	15	Clock	290
Locking and arming the vehicle	16	clock.	301
Luggage compartment	14	DAB country	317
Panic button	15	DAB format.	318
Smart Key	14	Date	290
Smart Key system transmitters	22	date	301
Unlocking and disarming the vehicle	15	Display language	289
Remote control battery	17	link DAB	316
Removing a headlamp	83	Time and date.	290
Refitting the grille	84	time and date	301
Refitting the headlamp	84	voice language	292
Removing the grille	83	Shuffle/random.	320, 325
Removing the headlamp	83	Side airbags	61
Removing a rear lamp	85	Sitting in the correct position	40
Repairing minor paint damage	203	Smart Key	14
Repeat compact disc tracks	320, 325	Replacement	13
Restricted performance	156	Smart Key system transmitters	22
Reverse camera	148	Snow chains	249
Road wheel changing	230	Spare wheel	232
Running out of fuel	184	Temporary	241, 356
Running-in	155	Speed warning	34
S		Sport mode	134
Safety	9	Stability control	160
Safety locks	72	Deactivating DSC	160
Safety precautions	179	Principle of operation	160
Scratchpad	348	Reactivating DSC	160
Screen settings	290	Starting the engine	
Seat belt height adjustment	56	General information	129
Seat belt reminder	55	Warming-up	130
Seat belts		Steering column lock	24
General information	53	Steering wheel adjustment	73
Seat belts during pregnancy	57	Steering wheel controls	74
Seats		Steering wheel heating	74
Electric	42	Stopping the engine	131
Folding	47, 51	Storage compartments	123
Heated	52	Sun blinds	117
Seats, manual	41	Sun visors	117
Service interval indicator	32	Sunroof	115
		Supplementary restraints system	
		Principle of operation	58

Index

- Surround camera system 148
 - Principle of operation 148
- Suspension 171
- Switching off the alarm 27
- Switching off the engine 131
- T**
- Tailgate 20
- Technical specifications
 - Adjustments 221
 - Capacities 221
 - Dimensions - Air suspension vehicles 272
 - Dimensions - Coil spring suspension vehicles 274
 - Lubricants and fluids 220
 - Technical specifications 270
 - V6 Diesel 270
 - V6 Petrol 270
 - V8 Petrol 271
 - Weights 271
- Telephone 346
 - Answer incoming call 340, 346
 - Call register 349
 - Call register menu 349
 - correcting/clearing number entries 346
 - Dialling 346
 - Dialling from the phone book 348
 - End call 340, 346
 - General information 337, 341
 - Information display 344
 - Last dialled numbers menu 349
 - Last number redial 346
 - Missed calls 349
 - missed calls 349
 - Phone book display 347
 - phone book scroll 348
 - Phone book search 348
 - received calls menu 349
 - Rejecting incoming call 340, 346
 - Scratchpad 348
 - Storing voice names via touchscreen 352
- Telephone controls 343
 - Facia 343
 - Steering wheel 338, 344
- Telephone display 344
- Telephone voice control 350
 - Correcting/Deleting and Cancelling inputs 351
 - Deleting/Clearing the entire phone book 354
 - Dialling a phone number 351
 - Dialling/Editing and Deleting from the phone book 354
 - General commands 350
 - Storing a telephone name/number 352
 - Telephone voice control 350
 - Using the voice control phone book 353
- Temperature controls 108
- Temperature display 34
- Temporary spare wheel 241, 356
- Terrain response 166
 - Driver override options 169
 - General 167
 - Grass-Gravel-Snow 167
 - Inappropriate program selection 169
 - Increased suspension height 168
 - Messages 170
 - Mud-Ruts 168
 - Principle of operation 166
 - Rock crawl 168
 - Sand 168
 - Wading 168
- Tilt sensor 27
- Time and date 290
- Tone adjustment 294
 - Balance and fade 294
 - Bass, treble and sub-woofer 294
 - bass, treble and sub-woofer 294
 - LOGIC7 294
 - Source memory 294
- Tool kit 229
 - 5-seat vehicles 229
 - 7-seat vehicles 229
- Touch screen care 288
- Tow ball
 - Fitting 197
 - Removing 198
 - Stowage 199

Index

Towing a trailer	190	Tyre pressure monitoring system	250
Fixed - tow ball	192	Messages	253
Multi-height drop plate - tow bar	193	TPM system operation	250
Trailer socket	190	Tyre pressures	356
Towing points	265	U	
Front towing point.	265	Under bonnet covers	209
Rear towing point	266	Fitting	209
Towing the vehicle on four wheels	268	Removal	209
After towing on four wheels	268	Unlocking	15
Towing weights	196	USB devices	329
TPM load setting	34	Using winter tyres	
Track selection	324	Approved winter tyres	249
Traction control		V	
Principle of operation	162	Valet mode	291
Traffic information.	299	Vehicle build plate.	269
Transfer gearbox	137	Vehicle identification number (VIN)	269
HIGH range (Hi)	137	Vents	105
LOW range (Lo)	137	VIN	269
Messages	139	Voice control.	75, 334
Range changing	137	Activating the system.	334
Range changing on the move	138	Command help.	335
Stationary range changing	138	Language and accent	334
Transmitter - HomeLink®	124	Notepad	336
Transmitters	22	Using the system	334
Transporting the vehicle	267	Voice commands	336
Trip computer	31, 34	Voice help	292
Type approvals	276	Voice recognition	
Tyre care	243	Storing via touchscreen	352
Age degradation	244	Voice settings	292
Checking tyre pressures	247	Volume adjustment.	293
Directional tyres	246	Automatic volume control (AVC)	293
Flat spots	248	Information announcements	293
High performance wheel and tyre combinations	245	Manual	294, 297
Long term storage	248	navigation guidance	293
Pressure compensation for ambient temperature changes	248	Telephone.	293
Punctured tyres.	244	Voice	294
Replacement tyres	245		
Tyre pressures	246		
Tyre wear	243		
Wear indicator.	244		
Tyre glossary			
Terms used	254		

Index

W

Warning indicators	38
Warning symbols	
Battery	222
Washer fluid check	219
Washer jets	98
Washing	200
Waveband selection	297, 304
Wheels and tyres	
General information	228
Windows	18
Electric	101
Windscreen	
Heated	110
Windscreen washer jets	98
Windscreen washers	97
Windscreen wipers	95
Intermittent variable delay	95
Speed dependent intermittent mode . . .	96
Speed dependent mode	95
Winter tyres	248
Wiper blades	
Changing	99