



Filling station information

TYRE PRESSURES

Air pressure naturally increases in warm tyres; if it is necessary to check the tyres when they are warm (after the vehicle has been driven for a while), you should expect the pressures to have increased by up to 30 - 40 kPa (0.3 - 0.4 bar) (4 - 6 lbf/in²). In this circumstance, Do not let air out of the tyres in order to match the recommended cold tyre pressures. See **TYRE CARE** (page 243).

Tyre pressure labels

The correct tyre pressures are shown on a label attached to the driver's door

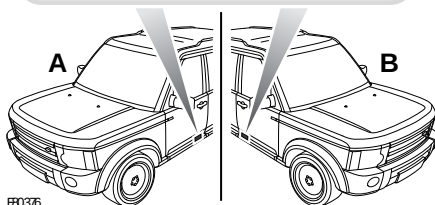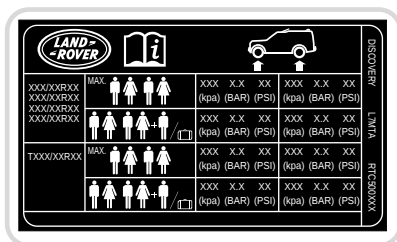

- A. Left-hand drive vehicle
- B. Right-hand drive vehicle

Temporary spare wheel

The tyre pressure in the temporary spare wheel/tyre should be maintained at 420 kPa (4.2 bar/60 lbf/in²) for all loading conditions.

ENGINE OIL SPECIFICATION

Variant	Specification
Diesel vehicles	SAE 5W-30 meeting specification WSS-M2C934-B only ¹
V6 Petrol vehicles	SAE 5W-30 meeting specification WSS-M2C913-C only ²
V8 Petrol vehicles	SAE 5W-20 meeting specification WSS-M2C925-A only

¹ If you are unable to find an oil that meets the specification defined by WSS-M2C934-B, an SAE 5W-30 engine oil meeting specification ACEA:C1 can be used.

² If you are unable to find an oil that meets the specification defined by WSS-M2C913-C, an SAE 5W-30 engine oil meeting specification ACEA:A3/B3 can be used.

Land Rover recommends:



ENGINE COOLANT SPECIFICATION

Top-up to the upper level indicator mark located above the **COLD FILL RANGE** text, on the side of the expansion tank. Use only a 50% mix of water and Castrol SF antifreeze. See **ENGINE COOLANT CHECK** (page 215).

Index

A

ABS driving hints	142	Audio unit overview	286
Accessories	11	Standard audio system controls	286
Adaptive front lighting system (AFS)	80	Touch screen audio system controls	287
Cornering lamps	81	Auto high beam	77
Adjusting the headlamps	80	Automatic climate control	107
Headlamp beam adjustment	80	General notes	110
Adjusting the steering wheel	73	Operation of controls	108
Adjusting the suspension	172	Automatic transmission	132
Access height	173	CommandShift™	134
Access height from off-road height	173	Electronically selected automatic	
Additional lift whilst in extended mode	175	modes	135
Automatic height change warnings	174	Kick-down in automatic mode	133
Crawl mode (locked at Access height)	173	Messages	136
Door open override	174	Selector lever positions	132
Extended mode	175	Sport mode	134
Remote operation	178	Auxiliary connections	328
Suspension freeze	175	Connecting a USB device	329
Suspension height indicators	172	Connecting an iPod	328
Adjusting the windscreen washer jets	98	Connecting more than one device	329
Front	98	Portable audio overview	328
Rear	98	Auxiliary heater	111
AFS	80	Auxiliary heating	
Air conditioning	108	Remote operation	114
Air suspension		Auxiliary input (AUX IN) socket	332
Principle of operation	171	Auxiliary mode	333
Air suspension messages	176	Auxiliary input devices	330
Air vents	105	Displaying track information	330
Intake air	106	Playing a portable device	330
Third row seats vent	106	Portable device settings	331
Airbag service information	65	Searching a portable device	331
Airbag warning lamp	64	Auxiliary power sockets	119
Alarm		Front auxiliary power socket	119
Principle of operation	26	Rear auxiliary power sockets	119
Alarm sensors	34		
Answer telephone call	340, 346		
Antifreeze	215		
Arming	16		
Arming the alarm	26		
Anti-theft alarm indicator	26		
Interior space protection	26		
Perimetric alarm	26		
Ashtray	118		
Audio controls	75, 310		

Index

B

Battery care	222
Check and replenish battery electrolyte	223
Battery charging	225
Battery warning symbols	222
Bi-Xenon headlamps	76
Bluetooth setup	345
Bluetooth operation	345
Bonnet lock	206
Bonnet opening and closing	206
Booster cables	223
Boosting from another vehicle	224
Boosting procedure	224
Booster cushions	72
Brake fluid check	216
Checking the fluid level	217
Topping up the fluid	217
Brakes	
Principle of operation	140
Bulb changing	85
Front fog lamp	90
Headlamp	86
Headlamp - Halogen high beam	88
Headlamp - Halogen low beam	87
Headlamp - Xenon	87
Interior lamps	93
Rear fog lamp	92
Rear lamp	92
Side repeater lamp	91
Bulb specification chart	94

C

Call register	349
Camera	147
Car wash	200
Care of touch screen	288
Catalytic converter	185
Centre console	121
Card holder	121
CD storage	121
Changing a bulb	85
Bulb access	86
Courtesy lamp bulb	93
Front fog lamp bulb	90
Front indicator lamp bulb	89
Front sider lamp bulb	89
Headlamp bulb (Halogen)	87
Headlamp bulb (Halogen) low beam	88
Headlamp bulb (Xenon)	87
Licence plate lamp bulb	92
Map lamp bulb	93
Rear lamp bulb	92
Side repeater lamp bulb	91
Static bending bulb	88
Stepwell lamp bulb	93
Tailgate lamp bulb	93
Vanity mirror lamp bulb	94
Changing a fuse	257
Changing a road wheel	230
Changing a wheel	240
Raising the vehicle (Air suspension)	234
Raising the vehicle (Coil suspension)	237
Spare wheel	232
Stowing the changed wheel	242
Using wheel chocks	234
Wheel changing safety	230
Changing the remote control battery	17
Changing the vehicle battery	226
Battery disposal	227
Battery replacement	227
Changing the wiper blades	99
Front	99
Rear	100
Channel automatic tuning	311

Index

Channel options	314	Controls, steering wheel	74
DAB search	315	Cool box	122
Finding a channel	314	Coolant	215, 356
Finding a subchannel	314	Coolant check	215
Finding an ensemble	315	Cruise control	75, 158
Charging the vehicle battery	225	Increasing cruising speed	159
Battery warning indicator	226	Principle of operation	158
Effects of battery disconnection	227	Reducing cruising speed	159
Check engine	156	Suspending cruise control	159
Checking the oil level	210, 211	Cup holders	120
Checking the wiper blades	99	Curtain airbags	61
Child safety locks	72	D	
Child seat positioning	68	Dashboard	28
ISOFIX child seat positions	69	Date and time	290
Recommended ISOFIX child seats	69	Daytime running lamps	76
Child seats	66	Detachable tow ball	197
Child restraint checklist	67	Fitting the tow ball	197
Seat belt automatic locking mechanism	67	Removing the tow ball	198
Cigar lighter	118	Dialling	346
Cleaning the alloy wheels	201	Dialling from the phone book	348
Cleaning the exterior	200	Diesel Particulate Filter (DPF)	157
Cleaning after off-road driving	200	Digital audio broadcasting	
Glass and mirrors	201	General information	308
Polishing	201	Dipstick - electronic	212, 213
Removing tar spots	200	Direction indicators	82
Underbody maintenance	201	Disabling the passenger airbag	62
Washing the vehicle	200	Airbag switched OFF	63
Cleaning the interior	201	Airbag switched ON	64
Airbag module covers	202	Passenger airbag status indicator	63
Carpet and fabrics	202	Disarming	15
Instrument pack, clock and audio unit	202	Display options	312
Leather	202	DAB radio text	312
Plastic and cloth	202	Touch-screen information panel	312
Seat belts	202	Display settings	290
Climate control	107	Drive away locking	34
Rear passenger	111	Driving after a collision	263
Timed	112	Before starting or driving	263
Clock	290, 301	When driving	263
Coded keys	25		
Compact disc pause	324		
Compact disc play options	325		
Compact disc player			
CD compatibility	319, 322		
Loading CDs	320, 323		
Controls, radio	303		

Index

E		F	
Economical driving	156	Facia overview	28
Driving tips for fuel economy	156	Fastening the seat belts	56
Maintenance and fuel economy	156	Releasing the belt	56
Ejecting compact discs	320, 323	Filling station information	
Electric exterior mirrors	102	Engine coolant specification	356
Folding the mirror body	103	Fuel filler flap	355
Mirror glass adjustment	102	Refuelling	355
Reverse mirror dipping	103	Tyre pressures	356
Electric parking brake (EPB)	143	Fog lamps	
Applying the electric parking brake	143	Front	79
Dynamic operation	144	Rear	79
Messages	146	Folding the seats	47, 51
Releasing the electric parking brake	144	Front fog lamps	79
Electric seats	42	Fuel	
Folding armrest	43	Petrol fuel guard	183
Electric sunroof	115	Fuel burning heater	111
Anti-trap mechanism	115	Fuel consumption	186
Sunroof calibration	116	Fuel consumption figures	186
Electric windows	101	Fuel cut-off	185
Anti-trap mechanism	101	Resetting the fuel cut-off system	185, 263
One touch operation	101	Fuel filler flap	182, 355
Operating the windows	101	Fuel guard	183
Rear window isolation switch	102	Fuel quality	179
Rear window operation	102	Alternative fuels for petrol engines	180
Emergency key blade	17, 21	Diesel engined vehicles	181
Ending a telephone call	340, 346	Petrol engined vehicles	180
Engine compartment overview	207, 208	Fuel specification	355
Engine coolant check	215	Fuse box locations	256
Checking the coolant level	215	Engine compartment fuse box	256
Topping up the coolant	215	Passenger compartment fuse box	257
Engine immobiliser		Fuse specification chart	258
Principle of operation	25	Engine compartment fuse box	258
Engine number	269	Passenger compartment fuse box	260
Engine oil	209		
Engine oil check	210, 211, 213		
Checking the oil level	210, 212		
Engine oil consumption	211, 213		
Engine oil specification	209, 356		
Topping up the oil	210, 212		
Engine systems fault	156		
EPB	143		
Essential towing checks	195		
Event data recording	10		
Exterior mirrors	102		

Index

G

Gauges	37
Fuel gauge	37
Tachometer	37
Temperature gauge	37
Gear changing	195
Gear selection	134
General driving points	154
Breakdown safety	155
Extreme driving conditions	154
Vehicle stability	154
Wading	154
General information on radio frequencies	13

H

Handset	14
Battery	17
Key blade	17
Hazard warning flashers	79
HDC	163
Hill Descent Control faults	165
Hill Descent Control in action	164
Messages	165
Head restraints	45
Front head restraints	45
Rear head restraints	46
Headlamp adjustment	80
Headlamp bulb	85
Headlamp delay	34
Headlamp power wash	98
Headlamp washers	98
Headlamps	
High and low beams	77
Headphones	327
Heated mirrors	110
Heated seats	52
Heated steering wheel	74
Heated windows and mirrors	110
Exterior mirrors	110
High beam assist	34
Hill descent control	163
Hill descent control (HDC)	
Principle of operation	163

Hints on driving with ABS	142
ABS and off-road driving	142
ABS warning indicator	142
Cornering Brake Control (CBC)	143
Electronic Brake Distribution (EBD)	143
Emergency Brake Assist (EBA)	143
HomeLink®	124
Accessories	126
Compliance	126
Erasing channels	126
Operation	125
Precautions	124
Programming	125
Rolling codes	126
Horn	75

I

Ignition	129
Information messages	30
Critical warning messages	30
Gear selector display	32
Information messages	30
Service interval indicator	32
Warnings messages	30
Inspecting safety system components	264
Instrument lighting dimmer	117
Instrument panel overview	36
Interior lamps	
Front interior lamps	82
Rear interior lamps	82
Interior mirror	104
Automatic dimming mirror	104
Manual mirror	104
iPod connection	328
ISOFIX anchor points	70
Tether strap anchorages	71

J

Jacking points	234, 237
Jump starting	223

Index

K	
Keyless entry	23
Smart Key check	23
Keyless locking	24
Steering column lock	24
Keyless starting	130
Backup procedure	131
If the engine fails to start	130
Keys	
Emergency key blade	17, 21
Keys and remote controls	
Principle of operation	13
L	
Lamps interior	82
Lamps master switch	77
Language settings	289
Lashing points	267
Last dialled numbers menu	349
Last number redial	346
Levelling	194
Licence plate lamp bulb	92
Lighting	
General information	76
Lighting control	77
Automatic control lamps	78
Headlamp courtesy delay	78
High and low beam headlamps	77
Side lamps	77
Load carrying	
General information	187
Loading compact discs	320, 323
Loading a CD (player empty)	323
Locking	16
Locking and unlocking	19
Automatic unlocking	19
Interior door handles and door locking levers	19
Master lock and unlock switches	19
Mislock	16
Opening the tailgate	20
Speed-related locking	19
Using the emergency key blade	21
Valet mode	291
Low line audio	
Radio controls	296
Tone adjustment	297
Luggage anchor points	187
Luggage covers	188
Operating the luggage cover	188
Removal and refitting of luggage cover	189
M	
Maintenance	
General information	204
Technical specifications	220
Manual seats	41
Manual transmission	132
Memory function	44
Entry and Exit mode	44
Recalling a stored memory position	44
Saving a memory position	44
Messages	
Information	30
Mirror	
Interior	104
Mirrors	
Exterior	102
Mirrors heated	110
Missed calls	349
N	
News information	307
Notepad commands	336
O	
Oil check	210, 211, 213
Oil level check	212, 213
Opening and closing the bonnet	206
Closing the bonnet	206
Opening the bonnet	206

Index

P

Paint damage	203
Parking aid	152
Front parking aid - manual operation	153
Principle of operation	152
System fault	153
Towing	153
Passenger airbag disable	62
Personalised settings	33, 289
Petrol fuel guard	183
Phone book	347
Dialling	348
Display	347
Scroll	348
Search	348
Phone controls	343
Phone display	344
Phonebook	
Phonebook	348
Portable audio interface	328
Portable devices	330
Power steering fluid check	218
Checking the fluid level	218
Topping up the fluid	218
Power wash headlamp	98
Preset buttons	313
Recalling a preset channel	313
Storing channels as presets	313
Principle of operation	
Access height	171
Battery-backed sounder	26
Crawl mode	172
Extended mode	171
Foot brake	140
High speed height	172
Messages	141
Off-road height	171
Operation	171
Vehicle security	26
Priority programme type (PTY)	307
Proximity cameras	148

R

Radio controls	303
Radio data system (RDS)	299, 305
Radio operation	
Band selection	297, 304
manual tuning	298, 304
Presets	298, 304
Seeking stations	304
seeking stations	298
Selecting preset stations	298, 304
station auto store	304
Radio reception	295, 302
Rain sensor	96
RDS	
Information broadcasts	306
news information	307
selecting traffic information	299, 306
Rear fog lamps	79
Rear lamps	85
Rear loadspace hatches	187
Rear passenger climate controls	111
Rear seat audio controls	326
Rear seats	46
Second row seats - 7-seat vehicle	48
Second-row seats - 5-seat vehicle	47
Third-row seats	50
Rear view camera system	147
principle of operation	147
Rear window wiper and washers	97
Reversing	98
Tailgate open disable	98
Washer	97
Wiper - continuous operation	97
Wiper - intermittent operation	97
Recommended towing weights	196
Towing weights - Australia only	196
Reduced engine performance	156
Refitting the vehicle battery	227
Refuelling	183, 355
Rejecting telephone call	340, 346

Index

Remote control	14	Settings	33, 316
Approach lighting	14	Announcements	316
Care of the Smart Key	15	Audible feedback	290
Emergency key blade	17	audio system	289
Irregular operation	15	Clock	290
Locking and arming the vehicle	16	clock.	301
Luggage compartment	14	DAB country	317
Panic button	15	DAB format.	318
Smart Key	14	Date	290
Smart Key system transmitters.	22	date	301
Unlocking and disarming the vehicle	15	Display language	289
Remote control battery	17	link DAB	316
Removing a headlamp	83	Time and date.	290
Refitting the grille	84	time and date	301
Refitting the headlamp	84	voice language	292
Removing the grille	83	Shuffle/random.	320, 325
Removing the headlamp	83	Side airbags	61
Removing a rear lamp	85	Sitting in the correct position	40
Repairing minor paint damage	203	Smart Key	14
Repeat compact disc tracks.	320, 325	Replacement	13
Restricted performance.	156	Smart Key system transmitters.	22
Reverse camera.	148	Snow chains	249
Road wheel changing	230	Spare wheel	232
Running out of fuel	184	Temporary	241, 356
Running-in	155	Speed warning	34
S		Sport mode.	134
Safety	9	Stability control.	160
Safety locks	72	Deactivating DSC	160
Safety precautions.	179	Principle of operation	160
Scratchpad	348	Reactivating DSC	160
Screen settings	290	Starting the engine	
Seat belt height adjustment.	56	General information	129
Seat belt reminder	55	Warming-up	130
Seat belts		Steering column lock	24
General information	53	Steering wheel adjustment	73
Seat belts during pregnancy	57	Steering wheel controls	74
Seats		Steering wheel heating	74
Electric	42	Stopping the engine	131
Folding	47, 51	Storage compartments.	123
Heated.	52	Sun blinds.	117
Seats, manual	41	Sun visors.	117
Service interval indicator	32	Sunroof.	115
		Supplementary restraints system	
		Principle of operation.	58

Index

Surround camera system	148	Telephone voice control	350
Principle of operation	148	Correcting/Deleting and Cancelling	
Suspension	171	inputs	351
Switching off the alarm	27	Deleting/Clearing the entire phone	
Switching off the engine	131	book	354
T		Dialling a phone number	351
Tailgate	20	Dialling/Editing and Deleting from the phone	
Technical specifications		book	354
Adjustments	221	General commands	350
Capacities	221	Storing a telephone name/number	352
Dimensions - Air suspension vehicles	272	Telephone voice control	350
Dimensions - Coil spring suspension		Using the voice control phone book.	353
vehicles	274	Temperature controls	108
Lubricants and fluids	220	Temperature display	34
Technical specifications	270	Temporary spare wheel	241, 356
V6 Diesel	270	Terrain response	166
V6 Petrol	270	Driver override options	169
V8 Petrol	271	General	167
Weights	271	Grass-Gravel-Snow	167
Telephone	346	Inappropriate program selection	169
Answer incoming call	340, 346	Increased suspension height	168
Call register	349	Messages	170
Call register menu	349	Mud-Ruts	168
correcting/clearing number entries	346	Principle of operation	166
Dialling	346	Rock crawl	168
Dialling from the phone book	348	Sand	168
End call	340, 346	Wading	168
General information	337, 341	Tilt sensor	27
Information display	344	Time and date	290
Last dialled numbers menu	349	Tone adjustment	294
Last number redial	346	Balance and fade	294
Missed calls	349	Bass, treble and sub-woofer	294
missed calls	349	bass, treble and sub-woofer	294
Phone book display	347	LOGIC7	294
phone book scroll	348	Source memory	294
Phone book search	348	Tool kit	229
received calls menu	349	5-seat vehicles	229
Rejecting incoming call	340, 346	7-seat vehicles	229
Scratchpad	348	Touch screen care	288
Storing voice names via touchscreen	352	Tow ball	
Telephone controls	343	Fitting	197
Facia	343	Removing	198
Steering wheel	338, 344	Stowage	199
Telephone display	344		

Index

Towing a trailer	190	Tyre pressure monitoring system	250
Fixed - tow ball	192	Messages	253
Multi-height drop plate - tow bar	193	TPM system operation	250
Trailer socket	190	Tyre pressures	356
Towing points	265	U	
Front towing point	265	Under bonnet covers	209
Rear towing point	266	Fitting	209
Towing the vehicle on four wheels	268	Removal	209
After towing on four wheels	268	Unlocking	15
Towing weights	196	USB devices	329
TPM load setting	34	Using winter tyres	
Track selection	324	Approved winter tyres	249
Traction control		V	
Principle of operation	162	Valet mode	291
Traffic information	299	Vehicle build plate	269
Transfer gearbox	137	Vehicle identification number (VIN)	269
HIGH range (Hi)	137	Vents	105
LOW range (Lo)	137	VIN	269
Messages	139	Voice control	75, 334
Range changing	137	Activating the system	334
Range changing on the move	138	Command help	335
Stationary range changing	138	Language and accent	334
Transmitter - HomeLink®	124	Notepad	336
Transmitters	22	Using the system	334
Transporting the vehicle	267	Voice commands	336
Trip computer	31, 34	Voice help	292
Type approvals	276	Voice recognition	
Tyre care	243	Storing via touchscreen	352
Age degradation	244	Voice settings	292
Checking tyre pressures	247	Volume adjustment	293
Directional tyres	246	Automatic volume control (AVC)	293
Flat spots	248	Information announcements	293
High performance wheel and tyre combinations	245	Manual	294, 297
Long term storage	248	navigation guidance	293
Pressure compensation for ambient temperature changes	248	Telephone	293
Punctured tyres	244	Voice	294
Replacement tyres	245		
Tyre pressures	246		
Tyre wear	243		
Wear indicator	244		
Tyre glossary			
Terms used	254		

Index

W

Warning indicators	38
Warning symbols	
Battery	222
Washer fluid check	219
Washer jets	98
Washing	200
Waveband selection	297, 304
Wheels and tyres	
General information	228
Windows	18
Electric	101
Windscreen	
Heated	110
Windscreen washer jets	98
Windscreen washers	97
Windscreen wipers	95
Intermittent variable delay	95
Speed dependent intermittent mode . . .	96
Speed dependent mode	95
Winter tyres	248
Wiper blades	
Changing	99