


Seats

ELECTRIC SEATS

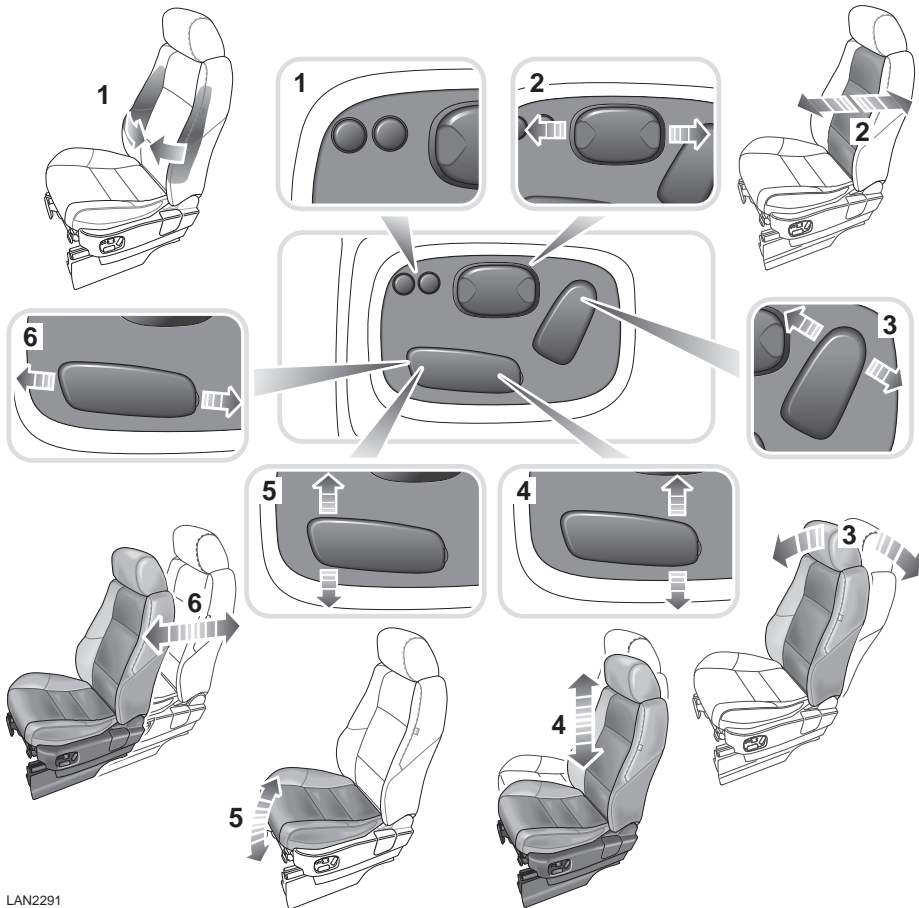

LAN2291

1. Bolster inflate/deflate
2. Lumbar support adjustment
3. Backrest adjustment
4. Height adjustment
5. Cushion tilt adjustment
6. Forward/backward adjustment

To adjust the seats, the Smart Key must be in the vehicle and the ignition switched on.

WARNING



Do not adjust any part of a seat while the vehicle is in motion. Vehicle movement may cause the seat to suddenly shift, potentially causing injury or loss of control.

Seats

Restricted seat travel

On those vehicles with seat memory, if an obstruction is encountered while the seat is in motion, the seat will stop moving and further seat movement will be restricted until reset.

To reset the seat to gain the full range of motion, remove the obstacle, adjust the seat to its restricted position then press and hold the switch for longer than two seconds to override the limited travel.

Folding armrest



LAN2292

Some vehicles are fitted with adjustable front seat armrests. These are used in the horizontal position or can be stowed vertically alongside the seat backrest.