

Locks


LOCKING AND UNLOCKING

Locking and unlocking the vehicle using the Smart Key, is explained earlier in this handbook. See **USING THE SMART KEY** (page 14).

Locking and unlocking the vehicle using the Keyless Entry system is explained later in this handbook. See **KEYLESS ENTRY** (page 23).

Note: If any door or the tailgate is unlocked 10 times within a short period, the latch is disabled for approximately one minute.

Master lock and unlock switches

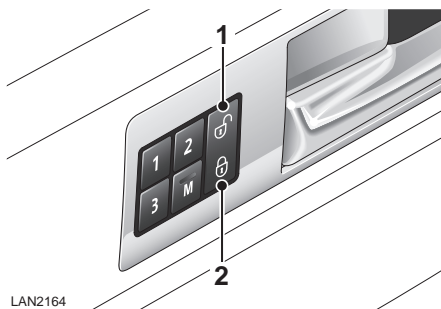

LAN2164

1. Press the unlock switch to unlock all the doors.
Note: The switch is inhibited when the vehicle is locked with Smart Key.
2. Press the lock switch to lock all the doors.

Drive-away locking

Drive-away locking automatically locks all the doors when the vehicle speed exceeds 8 km/h (5 mph).


This feature can be disabled via the **Vehicle Set-up** menu. See **VEHICLE INFORMATION AND SETTINGS MENU** (page 33).

Note: Pressing the master lock or unlock switch will override the speed locking function for the journey.

Automatic unlocking

If the vehicle is involved in a collision which causes a restraints device to deploy, all door locks will automatically be unlocked, the hazard warning lamps will flash and the interior lamps will illuminate.

Interior door handles and door locking levers

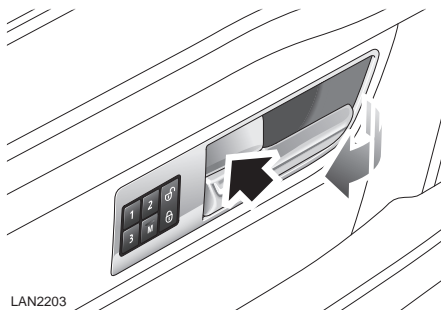

LAN2203

From inside the vehicle, all the doors can be locked by pressing either the driver or passenger lock lever (arrowed).

Each rear door can be individually locked by pressing the appropriate lever.

To open and unlock a front door, pull the door handle.

To open a rear door, first return the locking lever to its unlocked position, then pull the door handle.