

Driver information module

SERVICE INTERVAL INDICATOR



LAN2238


The service interval message will appear when a pre-determined distance or time before service is reached.

The mileage countdown is controlled by the engine management system and is adjusted to allow for driving style and conditions, to gauge when the appropriate service becomes necessary.

Note: After the completion of each service, the Land Rover Dealer/Authorised Repairer will reset the distance display to commence the countdown to the next service.

If the service/inspection date is passed without the service being carried out, or the service indicator being reset, the message **SERVICE REQUIRED** will be displayed.

GEAR SELECTOR DISPLAY

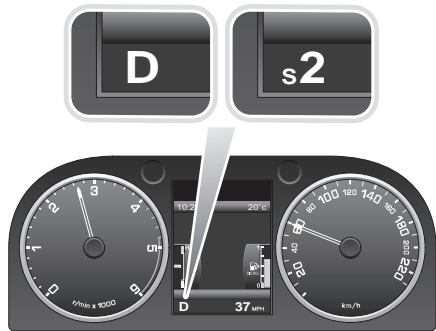

LAN2237

The display shows the current gear selector position (**P**, **R**, **N**, **D** or **S**). In addition, the display indicates which gear has been selected when the gearbox is in CommandShift mode.