


# Windows and mirrors

## Rear window isolation switch

### WARNING




If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of death or serious injury.

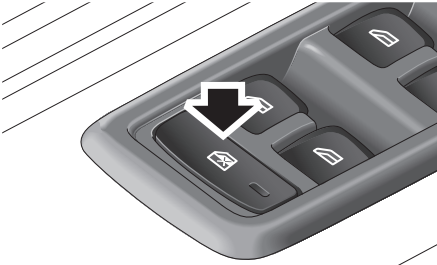

LAN2186

To prevent operation of the rear window switches, press the isolator switch. Press the switch again to restore independent control.

## Rear window operation

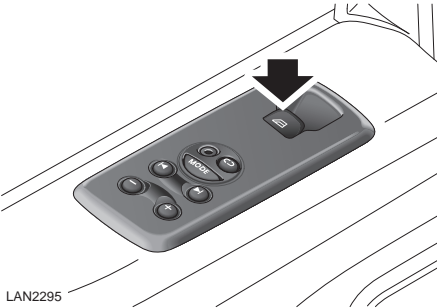

LAN2295

The rear windows can be operated from the switches on the rear doors if the rear window isolation switch has not been activated.

## EXTERIOR MIRRORS

### CAUTION



Depending on the type of mirror lens used, distances may be difficult to judge accurately. Objects viewed in the mirror may be closer than they appear.

The mirrors can be adjusted or folded when the ignition is on, and for up to five minutes after the ignition is switched off, provided the driver's door is not opened.

## Mirror glass adjustment




LAN2213

Press the **L** or **R** switch to select the required mirror. The tell-tale light in the switch will illuminate to indicate that it has been selected. Move the control to adjust the mirror as required.

**Note:** On vehicles with driver's seat memory, up to three exterior mirror positions can be stored. See **DRIVER'S SEAT MEMORY FUNCTION** (page 44).

# Windows and mirrors

## Folding the mirrors

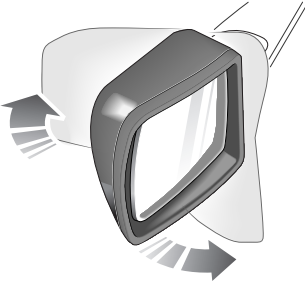


EB1039

The door mirrors fold forwards or rearwards on impact.

On those vehicles without power fold mirrors, the mirrors can be folded into a park position by pushing the mirror housing towards the side window.

## Power fold mirrors

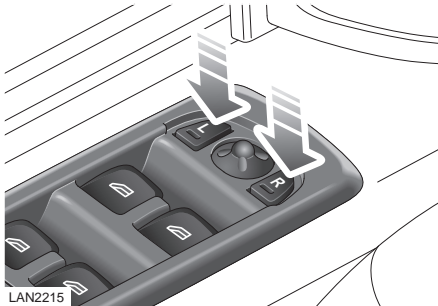

LAN2215

To fold the mirrors, press both the **L** and **R** mirror switches at the same time. To unfold the mirrors, press both of the switches again.

**Note:** Operation of the power fold mirrors is inhibited at speeds over 110 km/h (70 mph).

If the mirrors are accidentally knocked out of position (i.e. with one mirror folded and the other in the normal position), press both the switches again to re-synchronise them.

## Automatic power fold

If automatic power fold is enabled, the exterior mirrors will automatically fold and unfold when the vehicle is locked or unlocked using the Smart Key.

**Note:** If the mirrors were folded using the mirror switches they will not unfold when the vehicle is unlocked.



This feature can be enabled or disabled by a Land Rover Dealer/ Authorised Repairer.

## Mirror dip when reversing

The door mirrors can be set to dip automatically when reverse gear is selected to provide an improved viewing angle for reversing.

When enabled, select reverse gear to dip the mirrors. Whilst the mirrors are in the dipped position they can be adjusted to your required position using the mirror adjuster in the normal way.

The next time reverse gear is selected the mirrors will return to the positions you have selected.

When the gear selector is moved out of reverse, or the vehicle speed exceeds 12 km/h (7.5mph) in reverse, the mirrors will return to their normal driving positions.

This feature can be enabled or disabled via the **Vehicle Set-up** menu. See **VEHICLE INFORMATION AND SETTINGS MENU** (page 33).