

Digital Audio Broadcasting (DAB)

CHANNEL OPTIONS


 
To receive digital broadcasts, briefly touch the **DAB Radio** icon on the touch-screen.

Choose **DAB1**, **DAB2** or **DAB3** to receive digital radio broadcasts. The three DAB sources enable you to preset up to 18 different channels.

The channel that was last played on your chosen digital source will be selected for playback automatically.

Note: *If this is the first time you have used DAB radio, you must first build a list of available channels using the auto-tune function.*

Digital radio channels are organised into groups called ensembles. Some channels may sometimes provide one or more subchannels.

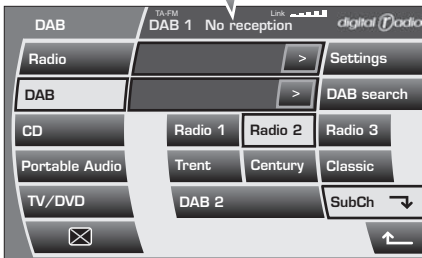

LAN2042

If the digital radio signal is lost or the system takes time to tune in to a channel, then the display screen will show the message **No reception**.

The problem may be caused by a temporary problem, such as buildings or trees blocking the signal, or it might be a problem with the broadcast service operator. Try tuning to an alternative channel and return later to see if the problem has been resolved.

Finding a channel



Briefly touch one of the channel seek buttons on the fascia or steering wheel to select the next available digital channel. The seek up button selects the next channel, the seek down button selects the previous channel.

Note: *If the next or previous channel is in a different ensemble, then there will be a pause before the channel is located. The message **Searching...** is displayed on the screen.*

If channels have been preset, select one of the six preset icons to start playing that channel.

Finding a subchannel



LAN2044

If subchannels are available under the current channel, the subchannel arrow icon (1) is displayed at the top of the touch-screen and the Subchannel icon is enabled.

To access the subchannels, select the downward-pointing arrow (2). Use the seek buttons to find the next/previous subchannel.

Digital Audio Broadcasting (DAB)

To return to the channel tier, select the upward-pointing arrow.

Note: When you select and play a subchannel, the subchannel icon is replaced by **SubCh**.

Note: You cannot store a subchannel as a preset.

Note: If you select the preset icon for the channel containing the subchannel you are currently playing, you will be returned to the channel.

Finding an ensemble

Touch and hold (two seconds) the seek buttons to find the next or previous ensemble. After a few seconds pause, the first channel in the ensemble found will start playing.

DAB search


The DAB search menu enables you to view lists of available ensembles, channels and subchannels. You can also perform searches based on programme type (PTY).

Select **DAB search** to display the DAB search menu.

Auto-tune

Select **Auto-tune** to build a list of available ensembles and channels for your current location.

Ensemble list

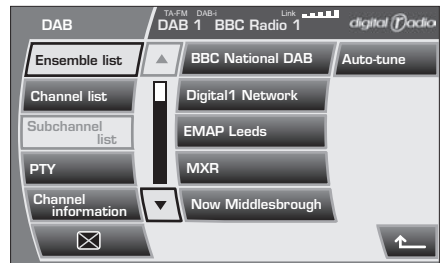

Select **Ensemble list** to display a list of all available ensembles. Select an ensemble name in the list to display a list of channels in that ensemble. Select a channel name to tune that channel.

Channel list

Select **Channel list** to display a complete list of all channels in all available ensembles. Select a channel name to tune that channel.

Subchannel list

Select **Subchannel list** to display a list of any subchannels available for the currently tuned channel. If no subchannels are currently available, then the Subchannel list option is disabled. If the maximum five subchannels are available, then use the arrows to scroll through the list.

PTY

Channels are categorised by the broadcaster as belonging to a programme type (PTY) category. You can display a list of channels organised according to their PTY category.

Select **PTY** to display a list of PTY categories that contain channels. Select a PTY category to display a list of channels in that category. Select a channel name to play that channel.