


Locks

KEYLESS LOCKING

WARNING



Never double-lock the vehicle with people, children or pets inside. In the event of an emergency they would be unable to escape and the emergency services would be unable to release them quickly.

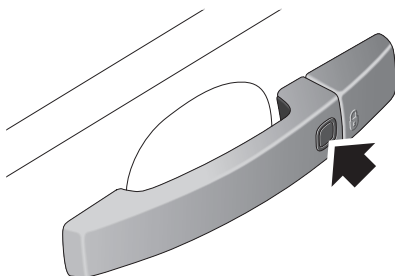

LAN2290

The vehicle will not lock automatically.

The vehicle will only lock if all doors, luggage compartment and bonnet are closed. If a lock attempt is made with an open aperture, the vehicle will not lock and two audible error warnings will sound.

- To single-lock the vehicle, press the button on the door handle once. The hazard warning lamps will flash once as confirmation (in some markets, an audible warning will sound).
- To double-lock the vehicle, press the button twice within three seconds. The hazard warning lamps will flash twice (with a long second flash). In some markets, a double audible warning will sound.

Note: Keyless locking will only activate when the Smart Key is detected outside the vehicle. If no Smart Key is present when the button is pressed, two warning tones will sound.

Window global closing

Press and hold the button on the door handle for three seconds, to lock the vehicle, arm the alarm and also close all open windows. The windows will stop closing when the button is released.

STEERING COLUMN LOCK

CAUTION



During vehicle recovery, the Smart Key must remain inside the vehicle, so that the steering column remains unlocked.

Your vehicle is fitted with an electronic steering column lock. The column unlocks when it detects a Smart Key inside the vehicle.

Any malfunction of the steering column lock will be indicated by the message **STEERING COLUMN LOCKED** displaying in the message centre. If this occurs:

1. Lock and then unlock the vehicle using the Smart Key.
2. Try again to unlock the steering column lock, by turning the steering wheel gently to the left and right.
3. If the malfunction still persists, seek qualified assistance immediately.