

# Digital Audio Broadcasting (DAB)

## PRESET CHANNELS

### Storing channels as presets



LAN2046

Store up to eighteen digital channels (six each on **DAB1**, **DAB2** and **DAB3**) using the named preset icons. Follow the procedure below to store channels as presets.

1. Search for and start playing the channel you want to preset.
2. Touch and hold (two seconds) the preset icon on which you want to store the current channel. Audio output is muted for a further two seconds while the channel is stored and a confirmation message is displayed.
3. Repeat steps 1 and 2 for each channel that you want to store as a preset.


**Note:** You cannot store a subchannel as a preset. If you try to store a subchannel, you will store the channel to which the subchannel belongs.

### Recalling a preset channel



LAN2046

 Make sure that you have selected the appropriate digital source (**DAB1**, **DAB2** or **DAB3**) and then briefly touch the preset icon you require. The channel you have selected will start to play automatically.



LAN2047

**Note:** If you try to recall a channel that has previously been stored as a preset, but is now unavailable or invalid, the message **No channel found** is displayed. You must choose another channel.