


# Audio system settings (touch screen)

## VEHICLE SETTINGS

### Valet mode

From the Home Menu or the Vehicle Settings menu, select **Valet**:

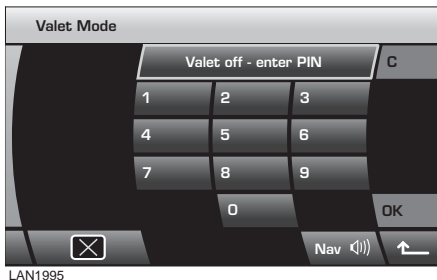

Enter a four digit Personal identification Number (PIN) by touching the digit screen pad. On completion, touch the **OK** button.

If you wish to cancel the PIN, touch the **C** button at any time during entering the number.

You will then be prompted to enter the PIN again. Enter the same PIN and touch **OK** to confirm.

If the two PINs match, a pop-up screen is displayed, advising you that valet mode has been activated.

The luggage compartment is now securely locked and operation of the touch screen is restricted.

On exiting and securing the vehicle, hand the Smart Key to the attendant.

### Deselecting valet mode

When you enter the vehicle, the **Valet Mode** screen will be displayed automatically. The screen indicates that valet mode is active by displaying **Valet on - enter PIN**.

Enter your four digit PIN and touch the **OK** button.

A pop-up screen is displayed, advising you that valet mode has been deactivated.

The screen will indicate that your PIN has been accepted by displaying **Valet off**.

- The luggage compartment will return to the previously set security level.
- Full functionality of the touch screen can now be used.