


Convenience features

CIGAR LIGHTER

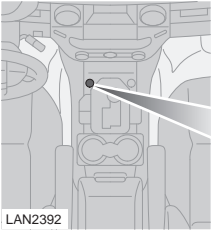


With the starter switch turned on, press the lighter in to heat up. When it has reached the correct temperature it will partially eject.

- Only hold the cigar lighter by the handle.
- Do not plug accessories into the cigar lighter socket. Use the auxiliary power sockets provided.

ASHTRAY

CAUTION

! Do not use the ashtrays for disposing of waste paper or other combustible items. The resulting fire may cause death or serious injury.

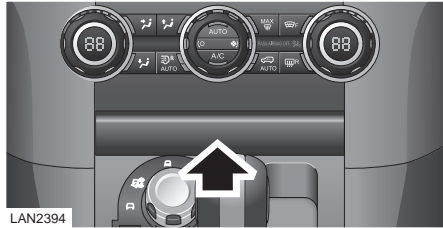

Push the bottom edge of the ashtray cover to open.

To remove the ashtray, open fully, then pull the ashtray forwards.