

Compact disc player (touch screen)

LOADING COMPACT DISCS

CAUTION



Do not force the disc into the slot.

Note: Some privately recorded CD-R discs may not have been acceptably formatted to be able to be played on this CD player.

An in-dash single compact disc (CD) player is integrated into the audio unit.

To access the CD player touch-screen menu:

1. From the touch screen Home menu, select **Audio/TV**.



LAN2467

2. Select **CD**.

Alternatively, press the **MODE** button and then select **CD**.

If a CD is loaded, playback will resume from the point of last play. If no CD is present, a **No disc** information screen will be displayed.

Loading a CD



Gently place a CD into the loading slot. A CD loading message is displayed on the touch-screen, while the disc is drawn into the player and the disc is loaded.

Ejecting a CD



Press the eject button.

Once the disc is ejected, remove it from the loading slot. If you fail to remove an ejected disc, it will be drawn back into the player after ten seconds.