


Driver information module

INFORMATION MESSAGES

CAUTION

 Never ignore warning messages and always take the appropriate action immediately. Failure to do so may result in damage to the vehicle. If you are uncertain about any message, stop the vehicle and seek qualified assistance.



LAN2258

Warning and information messages are displayed in the main message centre when a fault is detected or an alert state is triggered.

There are three categories of messages that may be displayed in the message centre:

- Critical - accompanied by a red warning icon and an audible alert.
- Warning - accompanied by an amber warning icon.
- Information.

Note: Messages are displayed in order of importance with critical messages taking priority.

Critical and warning messages

Critical and warning messages are displayed in the message centre until either the fault condition that caused the message has been rectified or the message is suppressed by pressing the **OK** button on the steering wheel.

If display of a message has been suppressed, the red or amber warning icon will remain illuminated to indicate that a problem exists.

You can redisplay any active messages that have been suppressed by selecting **Show Warnings** on the vehicle information menu. See **VEHICLE INFORMATION AND SETTINGS MENU** (page 33).

If more than one message is active, display of the messages will alternate at two second intervals.

Information messages

Information messages are displayed when the ignition is switched on/off or an alert state is triggered when driving the vehicle. For example, cancelling cruise control will display the message **CRUISE CANCELLED**.

Information messages are displayed for four seconds before being cleared.