

# Filling station information


## FUEL FILLER FLAP

### Fuel filler flap location



A small arrow on the fuel gauge indicates which side the fuel filler flap is located.

### Fuel filler flap opening

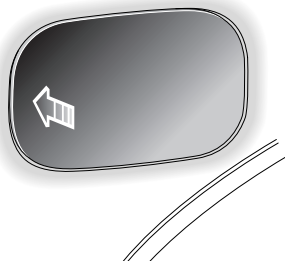

E83706

With the vehicle unlocked using the Smart Key, press and release the centre of the left edge of the fuel filler flap (where arrowed) to open.

#### Operating note

The fuel flap has a spring loaded release, do not force it open.

## REFUELLING


### WARNING



When refuelling the vehicle, switch off the ignition to ensure that the fuel burning heater (when fitted) is switched off.

#### Fuel tank capacity

- Petrol engine - 86 litres (19 gallons).
- Diesel engine - 82 litres (18.5 gallons).

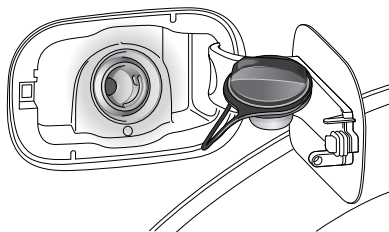

E83707

The filler cap is secured to the vehicle by a strap, and a holder is provided on the flap to locate the cap during refuelling.

Insert the pump nozzle into the filler neck, pushing aside the spring-loaded flap.

When delivery is complete, withdraw the nozzle and replace the filler cap. Turn the cap clockwise until it clicks three times, and close the fuel filler flap.

## Fuel specification

### CAUTIONS



This vehicle is not suitable for use with fuels containing more than 10% Ethanol. Do not use E85 fuels (85% Ethanol content). Equipment necessary for the use of fuels containing more than 10% Ethanol is not fitted to this vehicle. If E85 fuels are used, serious engine and fuel system damage will occur.



If the fuel tank is accidentally filled with the wrong type of fuel, do not start the engine. It is essential that you seek qualified assistance.

**Note:** Land Rover vehicle's are capable of running with up to a 5% blend of bio-diesel in accordance with European Standard EN590.

The correct fuel specification for your vehicle is shown on the inside of the fuel filler flap. See **FUEL SPECIFICATION** (page 179).