


Alarm

PRINCIPLE OF OPERATION

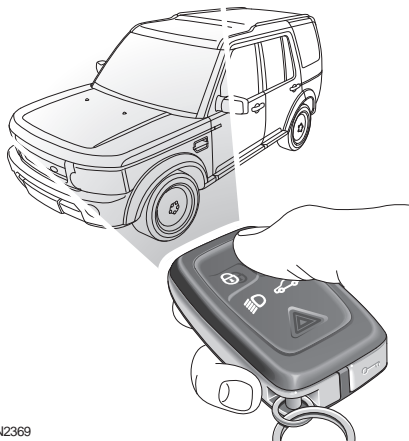

LAN2369

The anti-theft alarm system has a number of additional security features, some of which are selectable options and some are standard features of the vehicle.

To ensure maximum security and convenience, you are strongly advised to read this section and gain a full understanding of the features available.

Alarm indicator lamp

An indicator in the instrument panel will flash whenever the alarm is active.

Vehicle security

The security system fitted to your vehicle is Thatcham category one approved and meets European regulation 97/116 and directive 95/56 EC.

Battery-backed sounder

In some markets a separate, battery-backed sounder is fitted. This device will sound if the alarm is activated, or if the vehicle battery or the sounder are disconnected.

ARMING THE ALARM

Perimetric alarm

This feature is activated whenever the vehicle is locked using the Smart Key and protects the doors, bonnet and tailgate.

If any of these apertures are opened the alarm will be triggered.

When the perimetric alarm is activated, the direction indicators will flash once, and the anti-theft alarm indicator will flash.

Interior space protection

Interior space protection is activated whenever the vehicle is double locked.



E90808

Roof-mounted intrusion sensors monitor the interior space and activate the alarm if movement of air is detected in the passenger compartment.

You can temporarily disable the vehicle's interior space protection the next time the vehicle is locked with Smart Key, via the **Vehicle Set-up** menu. See **VEHICLE INFORMATION AND SETTINGS MENU** (page 33).

Note: This setting is automatically enabled the next time the vehicle is unlocked with the Smart Key.