

Instruments

WARNING INDICATORS



LAN2167

Attention warning indicators

If any of the following illuminates whilst driving a fault has been detected. Refer to the individual pages given below for further information.



Battery charge indicator. See **CHARGING THE VEHICLE BATTERY** (page 225).



Low oil pressure. See **ENGINE OIL** (page 209).



Electric Parking brake. See **ELECTRIC PARKING BRAKE (EPB)** (page 143).



Brake systems. See **PRINCIPLE OF OPERATION** (page 140).



Anti-lock braking system. See **HINTS ON DRIVING WITH ABS** (page 142).



Airbag system. See **AIRBAG WARNING LAMP** (page 64).



Engine. See **ENGINE RELATED PROBLEMS** (page 156).



Dynamic Stability Control (DSC). See **USING STABILITY CONTROL** (page 160).



Dynamic Stability Control (DSC) off. See **USING STABILITY CONTROL** (page 160).



Adaptive front lighting system. See **ADAPTIVE FRONT LIGHTING SYSTEM** (page 80).



Tyre Pressure Monitoring system. See **TYRE PRESSURE MONITORING SYSTEM** (page 250).



Low fuel. See **RUNNING OUT OF FUEL** (page 184).

Instruments

Information warning indicators

The following will illuminate during normal driving to indicate that a particular system or feature is operating.



Seat belt reminder. See **SEAT BELT REMINDER** (page 55).



Diesel glow plugs active. See **KEYLESS STARTING** (page 130).



Low gear range selected. See **TRANSFER GEARBOX** (page 137).



Hill Descent Control (HDC) active. See **USING HDC** (page 163).



Cruise control active. See **USING CRUISE CONTROL** (page 158).



Direction indicator. See **DIRECTION INDICATORS** (page 82).



Trailer direction indicator. See **TOWING A TRAILER** (page 190).



Headlamp high beam on. See **LIGHTING CONTROL** (page 77).



Automatic headlamp high beam on. See **LIGHTING CONTROL** (page 77).



Side lamps on. See **LIGHTING CONTROL** (page 77).



Rear fog lamps on. See **REAR FOG LAMPS** (page 79).



Front fog lamps on. See **FRONT FOG LAMPS** (page 79).