

# Climate control

---

## General notes

- For the automatic temperature control system to function efficiently, all windows and the sunroof should be closed, and the air intake vents free from ice, snow, leaves or other debris.
- In very humid conditions, slight screen misting may be experienced when the air conditioning system is turned on. This is a natural occurrence and will clear after a few seconds.
- The air conditioning compressor will not work when the engine is off.
- Surplus water produced by the dehumidifying process is expelled beneath the vehicle. This may result in a small pool of water forming when the vehicle is stationary.

## HEATED SCREENS AND MIRRORS



Heated windscreen



Heated rear screen

Press button to operate the required screen heater. The screen heater(s) will operate for a timed period before automatically switching off.

The screen heaters will be automatically switched on if defrost mode is activated or if the external air temperature is low.

**Note:** *The screen heaters only operate when the engine is running.*

### CAUTION



To avoid damage to the heating elements, do not attach labels to the rear screen. Also, do not scrape or use abrasive materials to clean the inside of the rear screen.

## Exterior mirrors

The exterior mirrors automatically disperse ice or mist. The mirror heaters are controlled according to the external temperature and wiper status.