

Air suspension

REMOTE OPERATION

WARNINGS



The Smart Key can be operated from either inside or outside the vehicle. It is therefore important that it is kept out of the reach of children at all times.



When operating the Smart Key from inside vehicle, make sure that an adult checks for obstructions under the vehicle and supervises the lowering process.



Care should be taken with all suspension height changes when a trailer is attached to the vehicle.

The buttons on the vehicle's Smart Key can be used to operate the air suspension, allowing you to remotely adjust the suspension height to assist in loading the vehicle or attaching a trailer.

To change the suspension height using the Smart Key, the vehicle must be stationary, the hazard warning lamps switched on and all doors must be closed.


If any button is released during the raising or lowering, all movement will stop, until the buttons are pressed again.

Initially the height will change slowly, but will increase after three seconds.

While the height is changing, the indicator on the raise/lower switch will be lit, according to the direction of movement. See **ADJUSTING THE SUSPENSION** (page 172).

If the starting height for the suspension is above or below the Normal height, all movement will stop when Normal height is reached. Release the buttons and then press them again, to continue.

The suspension will automatically return to Normal height when the vehicle is driven and the road speed exceeds 10 km/h (6 mph)

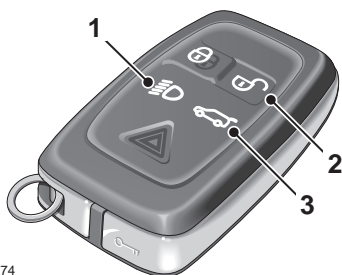

LAN2274

To raise the suspension, press and hold button **1** and button **2**.

To lower the suspension, press and hold button **1** and button **3**.