

Telephone (touch screen)

SELECTING PHONE MODE

Either press the Phone button on the facia; or from the Home Menu on the touch screen, touch the Phone icon.

DIALLING

The process below should be used for making calls.

1. From the Phone main display, touch the required numeric keypad icons.
2. Touch the **Make/Answer** icon.
3. When the call is active, the phone icon flashes in the Phone information display. Phone ringing will be heard.

Correcting/clearing number entries

Use the process below to correct or clear incorrect number entries.

1. Touch the **C** icon to delete the last digit entry.
2. Continue to hold the **C** icon to delete the entire entry.

Last number redial

Note: This function will only be available if your phone is capable of sending the last number redial to the vehicle.

1. Touch the **Make/Answer** icon.
2. The last dialled number is displayed and redialled.

ANSWERING/REJECTING CALLS

Answer incoming call

1. If the Phone main display is shown when there is an incoming call, touch the **Make/Answer** icon to answer the call. The phonebook contact name will be shown if stored, the caller's phone number is displayed if available.
2. If another touch screen mode is active when an incoming call is received, an information pop-up will appear.
3. Touch the **Make/Answer** icon on the pop-up to answer the incoming call.

Reject incoming call

1. If the Phone main display is shown when there is an incoming call, touch the **End** softkey to reject the call.
2. If another touch screen mode is active when an incoming call is received, an information pop-up will appear.
3. Touch the **End** icon on the pop-up to reject the incoming call.

End call

If the Phone main display is showing when you wish to end your call, touch the **End** icon to terminate the call.

If another touch screen mode is active (e.g. Navigation) when you wish to end your call, press the **Phone** button on the facia to access the Phone screen and then touch the **End** icon to terminate the call.