

Wipers and washers

CHECKING THE WIPER BLADES

CAUTION

! Only use cleaning products which have been approved for use on automotive glass and rubber. Inappropriate products may cause damage.



E80573

The wiping edge of the blades should be cleaned periodically. Clean the blade edge by wiping with a soft cloth or sponge, using warm soapy water.


Also, check the blade rubber for cracks, splits and roughness. If any damage is found, replace the blade immediately to prevent damage to the glass.

CHANGING THE WIPER BLADES

CAUTION


! Only fit correct length and type of wiper blade. Failure to do so may cause damage to the wiper system; it may also affect the operation of the rain sensor.

Front

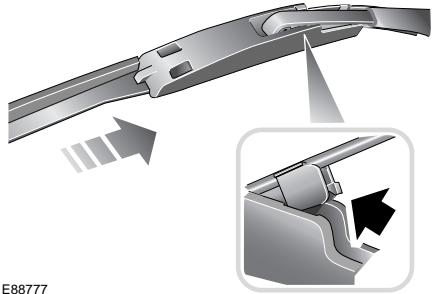

E88777

1. Lift the wiper arm away from the screen and pivot the blade assembly away from the arm.
2. Press the tab (arrowed in inset), to release the blade assembly.
3. Slide the blade assembly off the end of the wiper arm.
4. Carefully replace the arm to its stowed position.

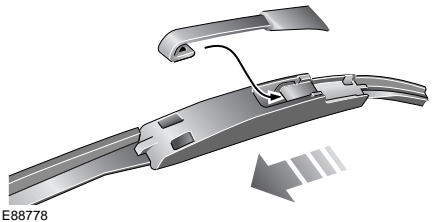


E88778

5. To replace, position the wiper arm into the aperture in the middle of the blade assembly and push firmly into position until the blade clips into place.


Wipers and washers

Rear

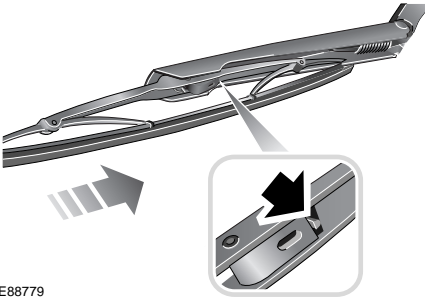

E88779

1. Lift the wiper arm away from the rear window.
2. Press the tab (arrowed in inset), to release the blade assembly.
3. Slide the blade assembly off the end of the wiper arm.
4. Carefully replace the arm to its stowed position.

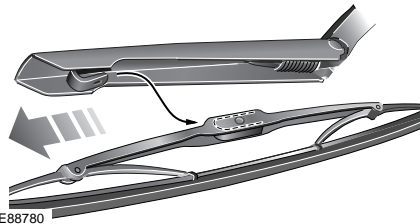

E88780

5. To replace, position the blade assembly onto the inside of the wiper arm and push firmly into position until the blade clips into place.