


# Steering wheel


## AUDIO CONTROL

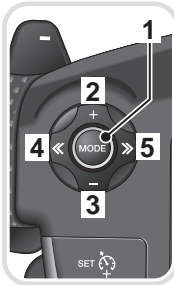

LAN2181

1. Mode select.
2. Volume up.
3. Volume down.
4. Search down.
5. Search up.

## VOICE CONTROL

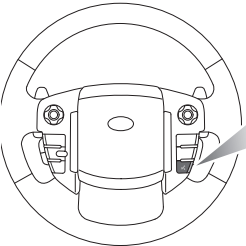

LAN2182


To activate voice control:

- Briefly pull the control. An audible alert will be heard, and **LISTENING** will be displayed on the main message centre. The system is now waiting for a voice command.

For general information about voice control. See **USING VOICE CONTROL** (page 334).

## CRUISE CONTROL

Cruise control is operated via the switches on the steering wheel. See **PRINCIPLE OF OPERATION** (page 158).

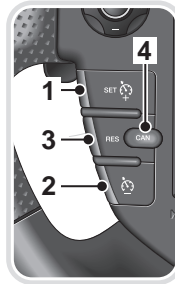

LAN2183

1. Set or increase the speed
2. Decrease the speed
3. Resume set speed
4. Cancels without erasing the memorised speed

## HORN



LAN2184

To operate, press either of the horn switches.