


Steering wheel


AUDIO CONTROL

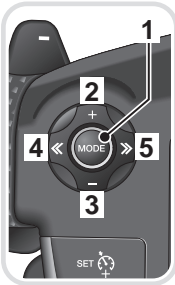

LAN2181

1. Mode select.
2. Volume up.
3. Volume down.
4. Search down.
5. Search up.

VOICE CONTROL

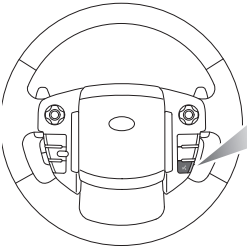

LAN2182


To activate voice control:

- Briefly pull the control. An audible alert will be heard, and **LISTENING** will be displayed on the main message centre. The system is now waiting for a voice command.

For general information about voice control. See **USING VOICE CONTROL** (page 334).

CRUISE CONTROL

Cruise control is operated via the switches on the steering wheel. See **PRINCIPLE OF OPERATION** (page 158).

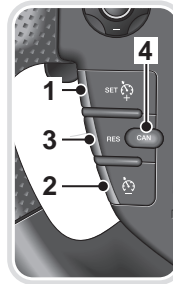

LAN2183

1. Set or increase the speed
2. Decrease the speed
3. Resume set speed
4. Cancels without erasing the memorised speed

HORN



LAN2184

To operate, press either of the horn switches.