

Radio (touch screen)

NEWS INFORMATION

Selecting news information



LAN2344

Press and hold the **INFO** button for more than 2 seconds, to select or de-select News Information - the word **NEWS** will appear in, or disappear from, the display accordingly.

If a news broadcast is received, the current audio source will be interrupted by the information broadcast.

The station name and **NEWS** will alternately appear in the display. At the end of the broadcast, the previously selected audio source will resume.

Note: Both traffic and news information can be selected at the same time. However, the radio will always give priority to traffic information.

Cancelling an announcement

To cancel an announcement briefly press the **INFO** button.

PRIORITY PROGRAMME TYPE (PTY)

The RDS (Radio Data System) allows programmes to be categorised by the broadcast type (rock music, current affairs, news etc.).


This in turn, allows you to search for a station by choosing the type of broadcast that you wish to listen to.

Note: The PTY menu is not available when the vehicle is moving.

Searching by PTY category

To use the PTY feature, touch the **Settings** icon located on the main Radio screen.

When the settings menu is displayed touch **PTY** to display a list of available PTY categories.

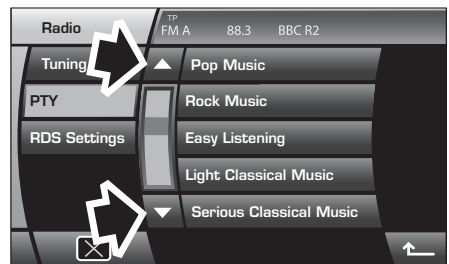

LAN2345

Scroll up or down the list of available PTY categories using the on-screen arrows.

Touch a PTY category to select it, the audio unit will search for and then retune to an available station belonging to that category. **Searching** will be displayed in the information display.

If no station is found in that category, then **No PTY** is displayed and you will return to the current station.