

# Compact disc player (standard)

## PLAYING A COMPACT DISC

### CAUTION



Do not force the disc into the slot.

**Note:** Some privately recorded CD-R discs may not have been acceptably formatted to be able to be played on this CD player.

An in-dash single compact disc (CD) player is integrated into the audio unit.

Gently place a CD into the loading slot, the disc will be drawn into the player and loaded.

Press the **CD** button on the facia to select CD playback mode.


If a CD is loaded, playback will resume from the point of last play.

### Ejecting a CD

Press the eject button.

Once the disc is ejected, remove it from the loading slot. If you fail to remove an ejected disc, it will be drawn back into the player after ten seconds.

## TRACK SELECTION

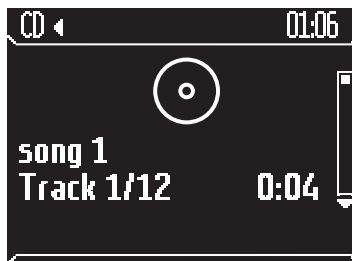

LAN2583

**Track 1/12** - Track number of the track being played.

**00:04** - Track elapsed play time from start of track.

You can move to the next or previous CD track, using the seek buttons.

Briefly touch the seek buttons to move to the previous or next track.

Touch and hold (two seconds) to play rapidly back through one or more tracks (review) or rapidly forward through one or more tracks (cue).

Normal playback resumes when the seek button is released.

### Shuffle

Selecting **Shuffle** alters the playback order for the current CD so that tracks are played in a random sequence.

Shuffle playback can be cancelled by deselecting the option under the **Track** menu.

### Repeat

Selecting **Repeat** will play the current track repeatedly.

Repeat playback can be cancelled by deselecting the option under the **Track** menu.

**Note:** Repeat can be cancelled by pressing the track up or track down button.