

Compact disc player (touch screen)

TRACK SELECTION



Tr 12 - Track number of the track being played.

03:47 - Track elapsed play time from start of track.

You can move to the next or previous CD track, using the seek buttons either on the fascia or on the steering wheel.

Briefly touch the seek buttons to move to the previous or next track.

Touch and hold (two seconds) to play rapidly back through one or more tracks (review) or rapidly forward through one or more tracks (cue).

Normal playback resumes when the seek button is released.

COMPACT DISC PAUSE



LAN2469

Select **II** to pause the current track. While play is paused, the icon will be highlighted, select it again to resume playback.

Note: If the volume is turned down to zero, CD playback is automatically paused. Play resumes when the volume is increased.