


# Locks

## KEYLESS ENTRY

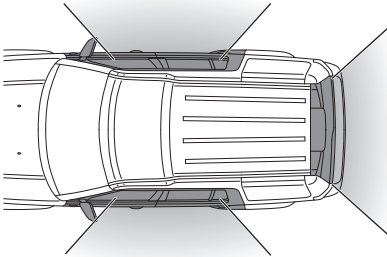

LAN2380

Keyless entry allows the driver to unlock and disarm the vehicle by simply operating the door handle. The Keyless Entry function operates in the following manner:

- As a door handle is operated, the vehicle emits a search signal.
- If the Smart Key is within approximately 1.0 m (3 feet) of the operated door handle, the signal will be acknowledged.
- The vehicle recognises the Smart Key and disarms the alarm and unlocks the vehicle according to the current security setting (either Single-point or Multi-point entry). The hazard warning lamps flash twice as confirmation (in some markets an audible warning will sound twice).

**Note:** The Smart Key needs only to be on the driver's person or in a non-metallic bag or briefcase. It does not need to be exposed or handled.

**Note:** If Single-point entry is the current security setting and a door other than the driver's door is opened first, then all doors will be unlocked. If the driver's door is opened, only the driver's door will be unlocked. All other doors and the luggage compartment will remain locked.

## Smart Key check

When the last open door is closed, the vehicle will perform a search of the vehicle interior for the Smart Key. If one is not found, **Smart Key Not Found Place As Shown** will be displayed for four seconds in the message centre. This is to alert the driver that the Smart Key may have been inadvertently removed from the vehicle.