

Audio level settings (touch screen)

Voice volume

Press the **Voice** icon from the volume set up menu, to adjust the volume level for voice messages.

To increase the volume level, press the **+** icon. Each press will select the next bar to the right, up to the maximum (25).

To decrease the volume level, press the **-** icon. Each press will select the next bar to the left, down to the minimum (5).


Manual volume adjustment

During normal audio/video playback, a news interrupt, navigation guidance, telephone interrupt or voice message, the volume level can be adjusted by turning the rotary control.

Resetting the volume settings

Press the **Reset All** icon from the volume set up menu, to move to default settings position.

TONE ADJUSTMENT

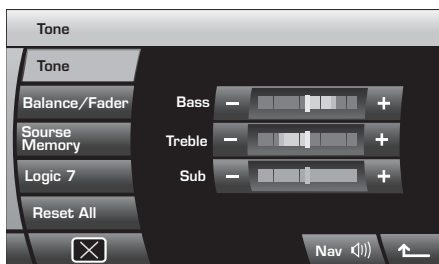

LAN2465



Press the **Tone** button to display the Tone menu. From this menu, the settings for Bass, Treble, Sub-woofer, Balance, Fade and Logic 7 can be adjusted/enabled.

Sub-woofer, Balance, Fade and Logic 7 can be adjusted/enabled.

Note: If no change is made within ten seconds, the screen will revert to that which was displayed prior to selecting the tone adjustment menu.

Bass, treble and sub-woofer

With the Tone menu displayed, press the **Tone** icon in the bottom left hand corner. The adjustments for Bass, Treble and Sub-woofer are made, using the **+** and **-** icons to increase or decrease the settings, as required.

Balance and fade

To access the Balance and Fade adjustment screen, press the **Balance/Fader** icon on the Tone menu screen.

The balance and fade adjustments are made by moving the position of the highlighted squares using the four arrow icons. The highlighted squares represent the bias direction for audio output.

To reset the balance and fade adjustments to the mid position, touch the **Reset All** icon.

Source memory

Source memory allows settings to be adjusted and memorized for individual audio sources. Further explanation can be obtained by pressing the **Source Memory** icon.

Logic 7

Logic 7 delivers audio source output using a seven channel feed. This provides a three dimensional audio effect, by controlling the vehicle speakers individually. This allows instruments, sound effects and dialogue within recorded or broadcast audio sources, to be clearly placed around the passenger cabin.

To turn Logic 7 on or off, press the **Logic 7** icon.

Tone reset all

With the Tone menu displayed, press the **Reset All** icon. The settings revert to the mid position.