Controls overview

CONTROLS

- 1. Map reading lamp switch.
- 2. Main interior lamp switch.
- 3. Passenger airbag warning lamp.
- 4. Sunroof switches
- 5. Trip computer switch.
- 6. High beam/Direction indicator.
- 7. Cruise control switches
- 8. Instrument pack and message centre.
- 9. Audio controls.
- 10. Wiper/washer controls.
- 11. START/STOP button
- 12. Audio system and controls.
- 13. Display screen.
- 14. Parking aid switch.
- 15. Central locking, unlock.
- **16.** Hazard warning light control switch.
- 17. Central locking, lock.
- 18. Stop/start system off button.
- 19. Main climate control panel.
- 20. Air conditioning on/off button.
- 21. Dynamic stability control on/off button.
- 22. Terrain response control.
- 23. Power socket
- 24 Handhrake lever
- 25. Gear selector.
- 26. Hill descent control (HDC) switch.
- 27. Climate control recirculation on/off switch.
- 28. Remote control docking port.
- 29. Telephone controls.
- 30. Horn buttons.
- 31. Steering column adjustment lever.
- **32.** Exterior mirror adjustment controls.
- 33. Window switches.

- 34. Window isolator switch
- **35.** Headlamp levelling control.
- **36.** Rear fog lamp switch.
- 37. Main exterior lighting control.
- 38. Front fog lamp switch.
- 39. Instrument illumination dimmer control.

