


## INTERIOR LAMPS

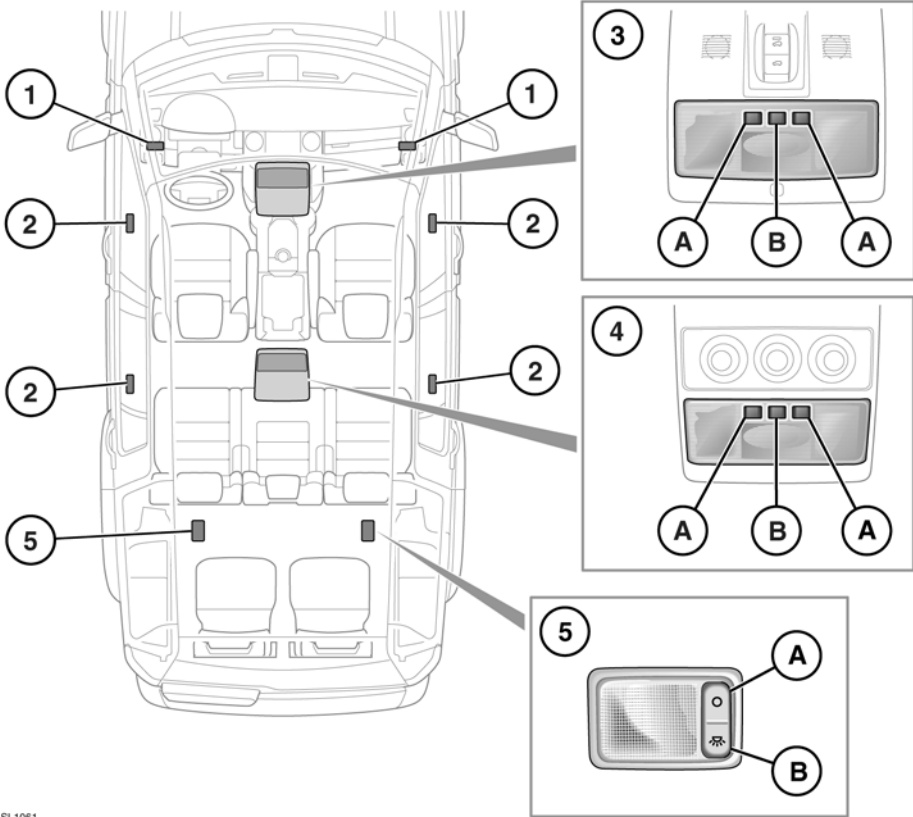

SL1061

1. Front footwell lamps:  
Automatically illuminate when the doors are opened.
2. Puddle lamps:  
Automatically illuminate when the doors are opened.

### 3. Map reading/interior lamps:

- A. Map light controls (on/off).
- B. Main interior lamp control (on/off/Auto).

To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode the lamps will illuminate when a door is opened.

**4. Rear interior light control:**

**A.** Map light controls (on/off).

**B.** Main interior lamp control (on/off/Auto).

To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode the lamps will illuminate when a door is opened.

**5. Third row seating/loadspace interior lamps:**

**A.** Press to turn off.

**B.** Press to turn on.